

**Tractor. rates for 2025-2026**

Sl. No	Description of Item (2)	
		<b>Kuenzom Automobile Workshop</b>
1		0
2	VEHICLE PARTS	0
3	Air Filter	977
4	Acelarator cable	127
5	Arm Bush Lower	347
6	Arm Bush upper	247
7	Arm Steering Knuckle	7
8	Arm Sub-Assy Pitman	7
9	Axle Cone (Rear)	547
10	Axel Oil Seal	247
11	Axel Packing	7
12	Back Light Bulb	47
13	Ball Joint Upper	1877
14	Ball Joint Lower	2144
15	Battery	8977
16	Bearing Center support	7
17	Bearing Different Inner	447
18	Bearing Diff. Side Gear	457
19	Bearing Fronnt Wheel Inner	1377
20	Bearing Front Wheel Outer	1477
21	Bearing Rear Axle/Wheel	2177
22	Bearing Set Connecting Rod	677
23	Bearing Set Crankshalft	277
24	Bearing Tall Pinion Outer	977
25	Brake Booster Assy	5777
26	Brake Light Bulb (Double Point)	47
27	Brake Pad	0
28	Brake Shoe Rear	3277
29	Bumper Light Assy (Front)	377
30	Bush Front Suspension (Lower LH)	447
31	Bush Front Suspension (Lower RH)	447
32	Bush Front Suspension (Upper RH/LH)	457
33	Bush Rear Stablisher	277
34	Cam Shaft Bearing	777





35	Camp Bearing	7
36	Cap Assy. Fuel Filter	877
37	Center Bolt	87
38	Clutch Plate	1677
39	Clutch release Bearing	1257
40	Bendix Pinion	3277
41	Cross Bearing	1257
42	CV Joint (Outer)	0
43	CV Joint (Inner)	0
44	Cylinder Assy brake master	1257
45	Cylinder Assy clutch master	2147
46	Cylinder Kit Brake master	77
47	Cylinder Kit clutch Master	7
48	Cylinder Kit Front Disc Brake	7
49	Cylinder Kit Rear wheel	7
50	Deliver Valve	7
51	Diesel Filtter	927
52	Dust Guard	447
53	End Sub Assy Tie Rod (LH)	1257
54	End Sub Assy Tie Rod (RH)	1257
55	Engine Liner	977
56	Fan Belt	1257
57	Fan Sub-Assembly	7
58	Fly Ring Gear	7
59	Fog Lamp	657
60	Foot Stand	7
61	Four Wheel Bearing	7
62	Front Wheel Check Nut	127
63	Front Wheel Check Nut Lock	127
64	Fuel Filter	1237
65	Fuel Tank	0
66	Gasket Engine Overhaul	1677
67	Glass Back Light Assy LH/RH	127
68	Glass Back Light LH/RH	197
69	Glass Front Indicator LH/RH	7
70	Glow Plug	7
71	Grille Radiater (Black)Show	7
72	Grille Radiater (Chrompated)	1247
73	Hand Brake Cable (Front)	1247






74	Hand Brake Cable(Rear)	1237
75	Head and Rotor	0
76	Head Gasket	1977
77	Head lamp 3 pin	97
78	Head Lamp Assembly	1297
79	Horn	677
80	Indicator/Side Light bulb	47
81	Injector Nozzle	0
82	Kilometer Cable	677
83	Kin Pin Bearing	347
84	Kin Pin Sim	7
85	Lamp assy Front Bumper LH	477
86	Lamp Assy Front Bumper RH	477
87	Lens Front Indicator/side Light LH	247
88	Lens Front Indicator/Side Light RH	147
89	Link Rod Washer	47
90	Lifter Valve	377
91	Main Bearing Oil Seal	977
92	Mirror LH/RH	577
93	Oil Filter	947
94	Oil Pump Gear Inner	7
95	Oil Pump Gear Outer	7
96	Oil Seal Cam Shaft	397
97	Oil Seal engine rear	477
98	oil Seal Front axle inner	7
99	Oil Seal Front Hub Outer	547
100	Oil seal Oil Axle Outer	437
101	Oil Seal Rear Inner	327
102	Oil Seal Tail Pinion	727
103	Oil Seal Valve Stem	127
104	Piston Ring	977
105	Power Steering Oil	497
106	Power Steering Pump	2677
107	Pressure Plate	3277
108	Pump Service Kit	1247
109	Radiator Cap	677
110	Radiator Assembly	3277
111	Rain Guard	1677
112	Rear View mirror	677





113	Relay Glow Plug	127
114	Release Bearing	1207
115	Seal oil Timing Gear case	477
116	Self Starter Armature	1587
117	Shock Absorber	0
118	Shock Absorber Bush (Front)	127
119	Shock Absorber Front	0
120	Shock Absorber Rear	0
121	Shock Bush Lower/Upper	7
122	Shocker Washer	7
123	Silencer Assy	7
124	Silencer Pipe Holder Bush	147
125	Solenoid Switch (self)	2577
126	Spacer Rear Axle Bearing	127
127	Spring Bush Front - Rubber	147
128	Spring Front Leaf 2nd	0
129	Spring Front Leaf 3rd	0
130	Spring Front Leaf 4th	0
131	Spring Front Leaf 5th	0
132	Spring Metal Bush	0
133	Spring Front Leaf Main	0
134	Spring Mountain	0
135	Spring Rear Leaf 2nd	0
136	Spring Rear Leaf 3rd	0
137	Spring Rear Leaf 4th	0
138	Spring Rear Leaf 5th	0
139	Spring Rear Leaf Main	0
140	Stabilizer Link Bush	127
141	Stabilizer Link Rod	227
142	Stablizer Bush D type	347
143	Steering Damper	1247
144	Steering Knuckle Kit	7
145	Steering Rack Assembly	0
146	Steering Rod	0
147	Steering Yoke	7
148	Suspension Arm Upper	0
149	Suspension Arm Lower	0
150	Thermostat Valve	577
151	Thrust Washer	477
152	Tierod End	657

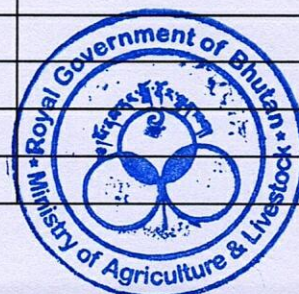



153	Timing Belt	657
154	Top sharp oil seal	377
155	Valve Exhaust	477
156	Valve External	477
157	Valve Guide	347
158	Valve Inlet	377
159	Valve Inner	7
160	Valve Seal	7
161	Valve Stem	277
162	Voltage Regulator	0
163	Water Pump Assembly	3277
164	Wheel Drum	0
165	Wheel Nut and Bolts (Front/Rear)	247
166	Wind Shields Glass	0
167	Wiper Arm	177
168	Wiper Motor	247
169	Wiper Blade	677
170	Wiper Tank Motor	377
171	Extra Accessories	0
172	Brake Oil Dot 3 (350 ml)	397
173	Anabond Gum	97
174	Cloth	10
175	Coolant (per liter)	247
176	Dash Board Polish	337
177	Distilled Water	37
178	Engine Oil	407
179	Gear Box Oil Seal	267
180	Gear Oil	377
181	Grease	348
182	Power Steering Oil	527
183	Rope	7
184	Tail and Pinum Gear (Set) (4 Wheel) Front	7
185	Disel Filter	0
186	Seat Cover (Set)	4577
187	Labour Charges (General)	0
188	Water Servicing and Air Servicing	0
189	Air Filter changing	0
190	Cam Shaft Oil Seal changing	0





191	Crank Shaft Grinding	0
192	Engine Block Boring	0
193	Engine Cleaning	0
194	Engine Head Removing and Refitting	0
195	Engine Oil & Filter changing	0
196	Engine Overhauling 4 Cylinder Engine	0
197	Engine Overhauling 6 Cylinder Engine	0
198	Engine Turning	0
199	FIT Overhauling	0
200	Fuel Filter changing	0
201	Glow Plug changing	0
202	Head Gasket changing	0
203	Main Bearing Oil Seal changing	0
204	Oil Pressure Switch changing	0
205	Oil Pump Gear changing	0
206	Piston Ring changing	0
207	Radiator Servicing (Removing & Refitting)	0
208	Replacement of Radiator Hose	0
209	Replacement of Thermostat Valve	0
210	Replacement of Fan Belt	0
211	Replacement of Injector Nozzle	0
212	Spark Plug changing or Servicing each	0
213	Tappet Adjustment	0
214	Tappet Cover Gasket changing	0
215	Timing Belt changing	0
216	Timing Gear Cover Oil Seal changing	0
217	Valve Facing each valve	0
218	Water Pump overhauling	0
219	Labour Charges (Electrical System)	0
220	Alternator Removing and Refitting/Overhauling	0





221	Alternator Repairing	0
222	Back Light changing each	0
223	Battery changing	0
224	C.B Point changing	0
225	changing of Head Light Bulb	0
226	Complete Electrical Wire Check Up	0
227	Cut Out Adjustment	0
228	Dynamo Armature Rewinding	0
229	Dynamo Overhauling	0
230	Fog Light New Fitting	0
231	Head Light Bulb changing each	0
232	Head Light changing each	0
233	Horn Adjustment/Fitting	0
234	Ignition Coil changing	0
235	Indicator Assembly changing each	0
236	Indicator Bulb changing	0
237	Indicator Glass changing each	0
238	Replacement of Electrical Switches	0
239	Replacement of Relays	0
240	Roof Lamp Bulb changing	0
241	Self Armature Rewinding	0
242	Self Starter Overhauling	0
243	Self Starter Removing and Refitting	0
244	Self Starter Repairing	0
245	Side Light Fitting	0
246	Wiper Arm and Blade changing	0
247	. Labour Charges (Steering Portion)	0
248	Kingpin Overhauling (one side)	0
249	Knuckle Oil Sealing changing	0
250	Power Steering Overhauling	0
251	Replacement of Pitman Arm	0
252	Steering Box Overhauling	0
253	Steering Yoke changing	0
254	Tid Rod End changing	0






255	Tube Repairing/Patching	0
256	Tyre Opening and Fitting	0
257	Wheel Alignment	0
258	Labour Charges (Transmission Portion)	0
259	Removing & Fitting of Spring Assy	0
260	Centre Bearing changing	0
261	Clutch Master Cylinder Kit changing	0
262	Clutch Master Cylinder Assembly changing	0
263	Clutch Plate changing	0
264	Cross Bearing Replacement each	0
265	Crown and Tail Fitting	0
266	Differential Overhauling/Removing & Refitting	0
267	Fly Wheel Bearing changing	0
268	Front Axle Oil Seal changing each wheel	0
269	Front Hub Oil Seal changing each wheel	0
270	Front Wheel Bearing changing	0
271	Gear Box Overhauling	0
272	Gear Oil changing	0
273	Nipple Greasing with Grease	0
274	Hubs Greasing per wheel	0
275	Knuckle Oil changing	0
276	Pressure Plate changing	0
277	Propeller Shaft Bolt Replacement	0
278	Propeller Shaft Cross Bearing changing each	0
279	Rear Axle Oil Seal changing and Greasing each	0
280	Rear Hub Oil Seal changing each wheel	0
281	Release Bearing changing	0
282	Gear Box removing and refitting	0





283	Spring Bush changing complet	0
284	Spring Leafs changing	0
285	Tail Pinion Bearing changing	0
286	Tail Pinion Oil Seal changing	0
287	Wheel Bolt changing each wheel	0
288	Labour Charges (Brake Portion)	0
289	Adjustment of brake (one each)	0
290	Brake Booster Assembly changing	0
291	Brake Booster Kit changing	0
292	Brake Disc removing and refitting	0
293	Brake Disc turining/ facing	0
294	Brake Drum turning	0
295	Brake Linning changing	0
296	Brake Pad changing (1 side)	0
297	Brake Servicing each wheel	0
298	Brake Shoe changing rear wheel	0
299	Brake Master Cylinder changing	0
300	Brake Master Cylinder repair kit changing	0
301	Front Brake Calpier Kit changing	0
302	Gas Welding (per inch)	0
303	Hoot Stitching	0
304	Master Cylinder Assembly changing	0
305	Master Cylinder Kit changing	0
306	Number Plate Writing	0
307	Wheel Cyclinder	0
308	W.C Kit changing each wheel front	0
309	Wheel Bearing changing and fitting	0
310	Wheel Bearing Rear changing	0
311	Break Light Assymbly	0

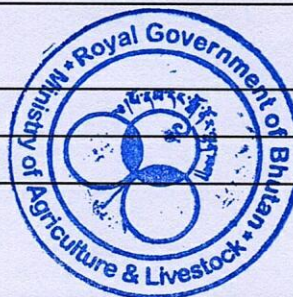



312	Labour Charges (Suspension Syetem	0
313	Coil Spring changing	0
314	Complete Spring bush changing	0
315	Shacker Plate/Pin changing each	0
316	Shackle Absorber Mounting chaging	0
317	Shock Absorber Bush changing	0
318	Shock Absorber changing each (front)	0
319	Shock Absorber changing each (rear)	0
320	Spring Leaf changing (each spring)	0
321	Spring rearranging	0
322	Stablizer Bush changing each	0
323	Labour Charges (Exhaust System	0
324	Silencer Brake/Mounting changing	0
325	Silencer Box removing and refitting	0
		114619

Sl. no	Description of Services	
		<b>Kuenzom Automobile Workshop</b>
1	TRACTOR	0
2	VEHICLE PARTS	0
3	Accelator Cable	147
4	Air filter	277
5	Battery	277
6	Benzer washer	47
7	Brake disc	47
8	Brake light	47
9	Brake Light bulb	347
10	Brake pad	47
11	Brake shoe	47
12	Cluth plate	247
13	Coolant	377





14	Diesel filter	377
15	Distilled water	377
16	Dynamo ( Alternater)	247
17	Engine chamber	1147
18	Engine mounting	477
19	Engine oil	147
20	Fan Belt	247
21	Fog light	7
22	Front axle (RH)	677
23	Front axle (LH)	877
24	Front beam Assembly	247
25	Front cross member	47
26	Fuel pump assembly	147
27	Fuel tank assembly	7
28	Fuse	147
29	Gear oil	77
30	Hand brake lever	477
31	Head Gasket	477
32	Head light	1147
33	Hood	247
34	Hub assembly	357
35	Hub grease	247
36	Hub oil seal	247
37	Hydraulic filter	7
38	Hydraulic oil	147
39	Jack	377
40	Lever	47
41	looking mirror	247
42	Mobil filter	1147
43	Nut & bolt	47
44	Oil Seal	147
45	Pressure nozel	247
46	pressure plate	247
47	Pump calibration	247
48	Radiator assembly	247
49	Seat assembly	47
50	Self starter	47
51	Side light assembly	47
52	Side light bulb	47
53	Steering Arm	47





54	Steering box assembly	977
55	Steering pitman	47
56	Steering shaft	47
57	Tie rod end (LH)	247
58	Tie rod end (RH)	377
59	Tie rod shaft	47
60	Timing Belt	277
61	Water gasket	1147
62	Water jacket	477
63	Water separator filter	1147
64	wheel bearing	447
		18984
Spare parts		114619
Services		18984
Total		133603

