Tripper Truck rates for 2025-2026		
Sl. no	Description of Item (2)	
		Kuenzom Automobile Workshop
1	Tripper Truck	0
2	VEHICLE PARTS	0
3	Air Filter	1247
4	Acelarator cable	7
5	Arm Bush Lower	477
6	Arm Bush upper	477
7	Arm Steering Knuckle	7
8	Arm Sub-Assy Pitman	7
9	Axle Cone (Rear)	7
10	Axel Oil Seal	247
11	Axel Packing	14
12	Back Light Bulb	47
13	Ball Joint Upper	1877
14	Ball Joint Lower	1877
15	Battery	8977
16	Bearing Center support	7
17	Bearing Different Inner	1677
18	Bearing Diff. Side Gear	1247
19	Bearing Fronnt Wheel Inner	3277
20	Bearing Front Wheel Outer	0
21	Bearing Rear Axle/Wheel	2177
22	Bearing Set Connecting Rod	1277
23	Bearing Set Crankshalft	447
24	Bearing Tall Pinion Outer	Government of 12577
25	Brake Booster Assy	C CHIEF TO THE
26	Brake Light Bulb (Double Point) Brake Pad	47
27	Brake Pad	0
28	Brake Shoe Rear	or Agriculture & 7677

29	Bumper Light Assy (Front)	477
30	Bush Front Suspension (Lower LH)	677
31	Bush Front Suspension (Lower RH)	777
32	Bush Front Suspension (Upper RH/LH)	847
33	Bush Rear Stablisher	847
34	Cam Shaft Bearing	147
35	Camp Bearing	247
36	Cap Assy. Fuel Filter	447
37	Center Bolt	97
38	Clutch Plate	9777
39	Clutch release Bearing	2977
40	Bendix Pinion	2977
41	Cross Bearing	1577
42	CV Joint (Outer)	
43	CV Joint (Inner)	
44	Cylinder Assy brake master	1677
45	Cylinder Assy clutch master	2977
46	Cylinder Kit Brake master	97
47	Cylinder Kit clutch Master	
48	Cylinder Kit Front Disc Brake	
49	Cylinder Kit Rear wheel	7
50	Deliver Valve	7
51	Diesel Filtter	1257
52	Dust Guard	447
53	End Sub Assy Tie Rod (LH)	Covernment of Shirts 1977
54	End Sub Assy Tie Rod (RH)	1977
55	Engine Liner	1247 of Agriculture 1877
56	Fan Belt	of Agriculture 1877

57	Fan Sala Assaultin		7
	Fan Sub-Assembly		
58	Fly Ring Gear		
59 60	Fog Lamp Foot Stand		1247
			647
61	Four Wheel Bearing		7
62	Front Wheel Check Nut		147
63	Front Wheel Check Nut Lock		147
64	Fuel Filter		247
65	Fuel Tank		0
66	Gasket Engine Overhaul		3977
67	Glass Back Light Assy LH/RH		5
68	Glass Back Light LH/RH		7
69	Glass Front Indicater LH/RH		7
70	Glow Plug		7
71	Grille Radiater (Black)Show		1257
72	Grille Radiater (Chrompated)		7
73	Hand Brake Cable (Front)		1977
74	Hand Brake Cable(Rear)		2477
75	Head and Rotor		0
76	Head Gasket		2177
77	Head lamp 3 pin		147
78	Head Lamp Assembly		1257
79	Horn		647
80	Indicater/Side Light bulb	4	
81	Injector Nozzle		0
82	Kilometer Cable	Covernment of de	1247
83	Kin Pin Bearing		7
84	Kin Pin Sim		7
85	Lamp assy Front Bumper LH		147
86	Lamp Assy Front Bumper RH	1 S S S S S S S S S S S S S S S S S S S	147

87	Lens Front Indicater/side Light LH	147
88	Lens Front Indicator/Side Light RH	147
89	Link Rod Washer	147
90	Lifter Valve	337
91	Main Bearing Oil Seal	647
92	Mirror LH/RH	1977
93	Oil Filter	1477
94	Oil Pump Gear Inner	77
95	Oil Pump Gear Outer	347
96	Oil Seal Cam Shaft	327
97	Oil Seal engine rear	547
98	oil Seal Front axle	7
99	Oil Seal Front Hub Outer	247
100	Oil seal Oil Axle Outer	447
101	Oil Seal Rear Inner	327
102	Oil Seal Tail Pinion	647
103	Oil Seal Valve Stem	247
104	Piston Ring	5
105	Power Steering Oil	477
106	Power Steering Pump	
107	Pressure Plate	1247
108	Pump Service Kit	
109	Radiater Cap	477
110	Radiater Assembly	7877
111	Rain Guard	1577
112	Rear View mirror	647
113	Relay Glow Plug	127
114	Release Bearing	214
115	Seal oil Timing Gear case	
116	Self Starter Armature	Covernment of 217'
117	Shock Absorber	A STATE OF THE PARTY OF THE PAR
118	Shock Absorber Bush (Front)	() / § /
119	Shock Absorber Front	377'

120	Shock Absorber Rear	2247
121	Shock Bush	47
	Lower/Upper	
122	Shocker Washer	47
123	Silencer Assy	2177
124	Silencer Pipe Holder Bush	127
125	Solenoid Switch (self)	2977
126	Spacer Rear Axle Bearing	2177
127	Spring Bush Front - Rubber	147
128	Spring Front Leaf 2nd	0
129	Spring Front Leaf 3rd	0
130	Spring Front Leaf 4th	0
131	Spring Front Leaf 5th	0
132	Spring Metal Bush	0
133	Spring Front Leaf Main	0
134	Spring Mountain	0
135	Spring Rear Leaf 2nd	7277
136	Spring Rear Leaf 3rd	7277
137	Spring Rear Leaf 4th	5277
138	Spring Rear Leaf 5th	5277
139	Spring Rear Leaf Main	47
140	Stabilizer Link Bush	47
141	Stabilizer Link Rod	1277
142	Stablizer Bush D type	147
143	Steering Damper	7
144	Steering Knuckle Kit	7
145	Steering Rack Assembly	7
146	Steering Rod	2977
147	Steering Yoke	6277
148	Suspension Arm Upper	2297
149	Suspension Arm Lower	3277
150	Thermostat Valve	1147
151	Thrust Washer	227
152	Tierod End Timing Belt	2977
153	Timing Belt	2977

154	Top sharp oil seal	147
155	Valve Exhaust	277
156	Valve External	277
157	Valve Guide	277
158	Valve Inlet	147
159	Valve Inner	247
160	Valve Seal	147
161	Valve Stem	147
162	Voltage Regulator	0
163	Water Pump Assembly	7277
164	Wheel Drum	2977
165	Wheel Nut and Bolts (Front/Rear)	347
166	Wind Shields Glass	9877
167	Wiper Arm	147
168	Wiper Motor	477
169	Wiper Blade	647
170	Wiper Tank Motor	0
171	Extra Accessories	0
172	Brake Oil Dot 3 (350 ml)	447
173	Anabond Gum	97
174	Cloth	10
175	Coolant (per liter)	247
176	Dash Board Polish	337
177	Distilled Water	37
178	Engine Oil	407
179	Gear Box Oil Seal	247
180	Gear Oil	397
181	Grease	347
182	Power Steering Oil	497
183	Rope	0
184	Tail and Pinum Gear (Set) (4 Wheel) Front	0
185	Disel Filter	0
186	Seat Cover (Set)	5777
	Minisa	219865
Sl. no		Agriculture & Line
	K	uenzom Automobile Workshop

1	Tripper Truck	0
2	Labour Charges (General)	0
3	Water Servicing and Air Servicing	447
4	Air Filter changing	7
5	Cam Shaft Oil Seal changing	247
6	Crank Shaft Grinding	2777
7	Engine Block Boring	2277
8	Engine Cleaning	7
9	Engine Head Removing and Refitting	2377
10	Engine Oil & Filter changing	297
11	Engine Overhauling 4 Cylinder Engine	2377
12	Engine Overhauling 6 Cylinder Engine	0
13	Engine Turning	1247
14	FIT Overhauling	0
15	Fuel Filter changing	247
16	Glow Plug changing	477
17	Head Gasket changing	1277
18	Main Bearing Oil Seal changing	377
19	Oil Pressure Switch changing	7
20	Oil Pump Gear changing	7
21	Piston Ring changing	477
22	Radiator Servicing (Removing & Refetting)	877
23	Replacement of Radiator Hose	147
24	Replacement of Thermostat Valve	Covernment of
25	Replacement of Fan Belt	197
26	Replacement of Injector Nozzle	377

27	Spark Plug changing	0
2,	or Servicing each	
28	Tappet Adjustment	7
29	Tappet Cover Gasket changing	677
30	Timing Belt changing	677
31	Timing Gear Cover Oil Seal changing	97
32	Valve Facing each valve	77
33	Water Pump overhauling	97
34	Labour Charges (Electrical System)	0
35	Alternator Removing and Refitting/Overhauling	477
36	Alternator Repairing	997
37	Back Light changing each	7
38	Battery changing	7
39	C.B Point changing	0
40	changing of Head Light Bulb	7
41	Complete Electrical Wire Check Up	0
42	Cut Out Adjustment	7
43	Dynamo Armature Rewinding	777
44	Dynamo Overhauling	977
45	Fog Light New Fitting	147
46	Head Light Bulb changing each	7
47	Head Light changing each	47
48	Horn Adjustment/Fitting	Government or 97
49	Ignition Coil changing	0
50	Incicator Assembly changing each	
51	Indicator Bulb changing	7 Of Agriculture & Harris of the Price of th
52	Indicator Glass changing each	0

53	Replacement of Electrical Switches	97
54	Replacement of Relays	47
55	Roof Lamp Bulb changing	7
56	Self Armature Rewinding	177
57	Self Starter Overhauling	147
58	Self Starter Removing and Refiting	747
59	Self Starter Repairing	977
60	Side Light Fitting	7
61	Wiper Arm and Blade changing	7
62	. Labour Charges (Steering Portion)	0
63	Kingpin Overhauling (one side)	7
64	Knuckle Oil Sealing changing	7
65	Power Steering Overhauling	777
66	Replacement of Pitman Arm	7
67	Steering Box Overhauling	377
68	Steering Yoke changing	7
69	Tid Rod End changing	297
70	Tube Repairing/Patching	197
71	Tyre Opening and Fitting	197
72	Wheel Alignment	397
73	Labour Charges (Transmision Portion)	0
74	Removing & Fitting of Agriculture & Live Spring Assy	677
75	Centre Beairng changing	7
76	Clutch Master Cylinder Kit changing	127

Tail Pinion Bearing changing		177
Spring Leafs changing	College	277
Spring Bush changing complet	or Agriculture & Las	477
Gear Box removing and refitting		2277
Release Bearing changing	ST. ST. ST.	977
Rear Hub Oil Seal changing each wheel	Nernmens	147
Rear Axle Oil Seal changing and Greasing each		197
Properller Shaft Cross Bearing changing each	No.	147
Propeller Shaft Bolt Replacement		147
Pressure Plate changing		1277
		0
Hubs Greasing per		377
Nipple Greasing with		477
Gear Oil changing		177
Gear Box Overhauling		1197
Front Wheel Bearing		477
Front Hub Oil Seal		197
Front Axle Oil Seal changing each wheel		197
Fly Wheel Bearing		147
Differentail Overhauling/Remvoin g & Refitting		1277
Crown and Tail Fitting		1149
Cross Bearing Replacement each		477
Clutch Master Cylinder Assembly changing Clutch Plate changing		977
	Clutch Plate changing Cross Bearing Replacement each Crown and Tail Fitting Differentail Overhauling/Remvoin g & Refitting Fly Wheel Bearing changing Front Axle Oil Seal changing each wheel Front Hub Oil Seal changing each wheel Front Wheel Bearing changing Gear Box Overhauling Gear Oil changing Nipple Greasing with Grease Hubs Greasing per wheel Knuckle Oil changing Pressure Plate changing Propeller Shaft Cross Bearing changing each Rear Axle Oil Seal changing and Greasing each Rear Hub Oil Seal changing each wheel Release Bearing changing each wheel Release Bearing changing Gear Box removing and refitting Spring Bush changing Complet Spring Leafs changing Tail Pinion Bearing	changing Clutch Plate changing Cross Bearing Replacement each Crown and Tail Fitting Differentail Overhauling/Remvoin g & Refitting Fly Wheel Bearing changing Front Axle Oil Seal changing each wheel Front Wheel Bearing changing Gear Box Overhauling Gear Oil changing Nipple Greasing with Grease Hubs Greasing per wheel Knuckle Oil changing Pressure Plate changing Propeller Shaft Bolt Replacement Properller Shaft Cross Bearing changing each Rear Axle Oil Seal changing and Greasing each Rear Hub Oil Seal changing and Greasing each Rear Box removing and refitting Spring Bush changing Complet Spring Leafs changing Tail Pinion Bearing

101	Tail Pinion Oil Seal changing		147
102	Wheel Bolt changing each wheel		127
103	Labour Charges (Brake Portion)		0
104	Adjustment of brake (one each)		127
105	Brake Booster Assembly changing		127
106	Brake Booster Kit changing		127
107	Brake Disc removing and refitting		477
108	Brake Disc turining/ facing		947
109	Brake Drum turning		947
110	Brake Linning changing		7
111	Brake Pad changing (1 side)		277
112	Brake Servicing each wheel		177
113	Brake Shoe changing rear wheel		197
114	Brake Master Cylinder changing		177
115	Brake Master Cylinder repair kit changing		127
116	Front Brake Calpier Kit changing		97
117	Gas Welding (per inch)		97
118	Hoot Stitching		0
119	Master Cylinder Assembly changing		47
120	Master Cylinder Kit changing	Covernmentor	47
121	Number Plate Writing	THE PARTY OF	377
122	Wheel Cyclinder	7	2977
123	W.C.Kit alamaiaa		7
124	Wheel Bearing changing and fitting	or Agriculture & Line	197

125	Wheel Bearing Rear changing	197
126	Break Light Assymbly	7
127	Labour Charges (Suspension Syetem	0
128	Coil Spring changing	7
129	Complete Spring bush changing	0
130	Shacker Plate/Pin changing each	47
131	Shackle Absorber Mounting chaging	47
132	Shock Absorber Bush changing	177
133	Shock Absorber changing each (front)	277
134	Shock Absorber changing each (rear)	177
135	Spring Leaf changing (each spring)	347
136	Spring rearranging	377
137	Stablizer Bush changing each	47
138	Labour Charges (Exhaust System	0
139	Silencer Brake/Mounting changing	7
140	Silencer Box removing and refitting	47
		49989
Spare parts		219865
Services		49989
Total		269854

Pariculture 8 Liv