 
 


Santafee rates for 2025-2026


Sl no	Description of Item	
		Kuenzom Automobile Workshop
1	Santafee	0
2	VEHICLE PARTS	0
3	Air Filter	977
4	Acelarator cable	7
5	Arm Bush Lower	747
6	Arm Bush upper	747
7	Arm Steering Knuckle	7
8	Arm Sub-Assy Pitman	7
9	Axle Cone (Rear)	7
10	Axel Oil Seal	7
11	Axel Packing	7
12	Back Light Bulb	47
13	Ball Joint Upper	847
14	Ball Joint Lower	847
15	Battery	9877
16	Bearing Center support	7
17	Bearing Different Inner	7
18	Bearing Diff. Side Gear	7
19	Bearing Fronnt Wheel Inner	6777
20	Bearing Front Wheel Outer	0
21	Bearing Rear Axle/Wheel	9877
22	Bearing Set Connecting Rod	847
23	Bearing Set Crankshalft	947
24	Bearing Tall Pinion Outer	1247
25	Brake Booster Assy	12577
26	Brake Light Bulb (Double Point)	47
27	Brake Pad	12777
28	Brake Shoe Rear	4777
29	Bumper Light Assy (Front)	847
30	Bush Front Suspension (Lower LH)	947
31	Bush Front Suspension (Lower RH)	847
32	Bush Front Suspension (Upper RH/LH)	947
33	Bush Rear Stablisher	847
34	Cam Shaft Bearing	557
35	Camp Bearing	7
36	Cap Assy. Fuel Filter	7
37	Center Bolt	7

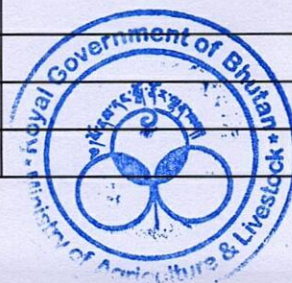


38	Clutch Plate	12577
39	Clutch release Bearing	4277
40	Bendix Pinion	4177
41	Cross Bearing	3217
42	CV Joint (Outer)	6797
43	CV Joint (Inner)	7277
44	Cylinder Assy brake master	3277
45	Cylinder Assy clutch master	2977
46	Cylinder Kit Brake master	1247
47	Cylinder Kit clutch Master	557
48	Cylinder Kit Front Disc Brake	57
49	Cylinder Kit Rear wheel	1257
50	Deliver Valve	7
51	Diesel Filtter	2977
52	Dust Guard	847
53	End Sub Assy Tie Rod (LH)	1777
54	End Sub Assy Tie Rod (RH)	1877
55	Engine Liner	1277
56	Fan Belt	4277
57	Fan Sub-Assembly	7
58	Fly Ring Gear	7
59	Fog Lamp	1247
60	Foot Stand	7
61	Four Wheel Bearing	7
62	Front Wheel Check Nut	347
63	Front Wheel Check Nut Lock	347
64	Fuel Filter	0
65	Fuel Tank	0
66	Gasket Engine Overhaul	4977
67	Glass Back Light Assy LH/RH	7
68	Glass Back Light LH/RH	1247
69	Glass Front Indicator LH/RH	7
70	Glow Plug	2977
71	Grille Radiater (Black)Show	7
72	Grille Radiater (Chrompated)	7
73	Hand Brake Cable (Front)	3277
74	Hand Brake Cable(Rear)	3277
75	Head and Rotor	0
76	Head Gasket	4277
77	Head lamp 3 pin	147

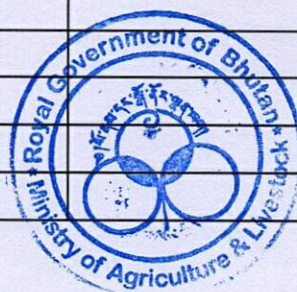

78	Head Lamp Assembly	9787
79	Horn	77
80	Indicator/Side Light bulb	47
81	Injector Nozzle	19777
82	Kilometer Cable	7
83	Kin Pin Bearing	7
84	Kin Pin Sim	147
85	Lamp assy Front Bumper LH	7
86	Lamp Assy Front Bumper RH	7
87	Lens Front Indicator/side Light LH	7
88	Lens Front Indicator/Side Light RH	7
89	Link Rod Washer	7
90	Lifter Valve	277
91	Main Bearing Oil Seal	1247
92	Mirror LH/RH	1877
93	Oil Filter	947
94	Oil Pump Gear Inner	7
95	Oil Pump Gear Outer	7
96	Oil Seal Cam Shaft	477
97	Oil Seal engine rear	847
98	oil Seal Front axle inner	7
99	Oil Seal Front Hub Outer	7
100	Oil seal Oil Axle Outer	7
101	Oil Seal Rear Inner	7
102	Oil Seal Tail Pinion	7
103	Oil Seal Valve Stem	147
104	Piston Ring	1277
105	Power Steering Oil	447
106	Power Steering Pump	7
107	Pressure Plate	11577
108	Pump Service Kit	7
109	Radiator Cap	1247
110	Radiator Assembly	15777
111	Rain Guard	2277
112	Rear View mirror	1977
113	Relay Glow Plug	1877
114	Release Bearing	4277
115	Seal oil Timing Gear case	677
116	Self Starter Armature	2977
117	Shock Absorber	0

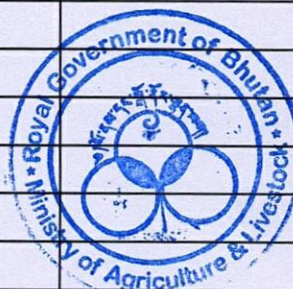 


118	Shock Absorber Bush (Front)	1247
119	Shock Absorber Front	8577
120	Shock Absorber Rear	6277
121	Shock Bush Lower/Upper	47
122	Shocker Washer	47
123	Silencer Assy	0
124	Silencer Pipe Holder Bush	47
125	Solenoid Switch (self)	3927
126	Spacer Rear Axle Bearing	1247
127	Spring Bush Front - Rubber	127
128	Spring Front Leaf 2nd	7
129	Spring Front Leaf 3rd	7
130	Spring Front Leaf 4th	7
131	Spring Front Leaf 5th	7
132	Spring Metal Bush	7
133	Spring Front Leaf Main	7
134	Spring Mountain	7
135	Spring Rear Leaf 2nd	7
136	Spring Rear Leaf 3rd	7
137	Spring Rear Leaf 4th	7
138	Spring Rear Leaf 5th	7
139	Spring Rear Leaf Main	7
140	Stabilizer Link Bush	247
141	Stabilizer Link Rod	1977
142	Stablizer Bush D type	477
143	Steering Damper	7
144	Steering Knuckle Kit	0
145	Steering Rack Assembly	16777
146	Steering Rod	0
147	Steering Yoke	6277
148	Suspension Arm Upper	5277
149	Suspension Arm Lower	6277
150	Thermostat Valve	1877
151	Thrust Washer	947
152	Tierod End	0
153	Timing Belt	4577
154	Top sharp oil seal	847
155	Valve Exhaust	647
156	Valve External	647
157	Valve Guide	247

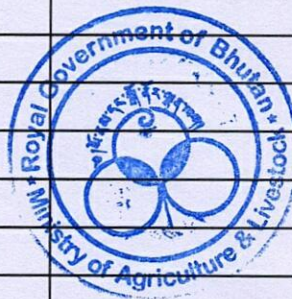 


158	Valve Inlet	247
159	Valve Inner	147
160	Valve Seal	147
161	Valve Stem	147
162	Voltage Regulator	1277
163	Water Pump Assembly	5277
164	Wheel Drum	0
165	Wheel Nut and Bolts (Front/Rear)	247
166	Wind Shields Glass	15777
167	Wiper Arm	1247
168	Wiper Motor	1247
169	Wiper Blade	677
170	Wiper Tank Motor	647
171	Extra Accessories	0
172	Brake Oil Dot 3 (350 ml)	447
173	Anabond Gum	97
174	Cloth	10
175	Coolant (per liter)	247
176	Dash Board Polish	337
177	Distilled Water	37
178	Engine Oil	407
179	Gear Box Oil Seal	947
180	Gear Oil	397
181	Grease	347
182	Power Steering Oil	447
183	Rope	0
184	Tail and Pinum Gear (Set) (4 Wheel) Front	0
185	Disel Filter	0
186	Seat Cover (Set)	6777
		338413


Sl. no	Description of Services	
		Kuenzom Automobile Workshop
1	Santafee	0
2	Labour Charges (General)	0
3	Water Servicing and Air Servicing	447
4	Air Filter changing	7
5	Cam Shaft Oil Seal changing	247
6	Crank Shaft Grinding	2777
7	Engine Block Boring	2277

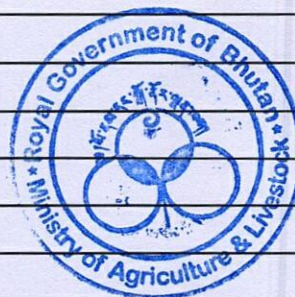 


8	Engine Cleaning	7
9	Engine Head Removing and Refitting	2377
10	Engine Oil & Filter changing	297
11	Engine Overhauling 4 Cylinder Engine	2377
12	Engine Overhauling 6 Cylinder Engine	0
13	Engine Turning	1247
14	FIT Overhauling	0
15	Fuel Filter changing	247
16	Glow Plug changing	477
17	Head Gasket changing	1277
18	Main Bearing Oil Seal changing	377
19	Oil Pressure Switch changing	7
20	Oil Pump Gear changing	7
21	Piston Ring changing	477
22	Radiator Servicing (Removing & Refitting)	877
23	Replacement of Radiator Hose	147
24	Replacement of Thermostat Valve	7
25	Replacement of Fan Belt	197
26	Replacement of Injector Nozzle	377
27	Spark Plug changing or Servicing each	0
28	Tappet Adjustment	7
29	Tappet Cover Gasket changing	677
30	Timing Belt changing	677
31	Timing Gear Cover Oil Seal changing	97
32	Valve Facing each valve	77
33	Water Pump overhauling	97
34	Labour Charges (Electrical System)	0
35	Alternator Removing and Refitting/Overhaul	477
36	Alternator Repairing	997
37	Back Light changing each	7
38	Battery changing	7
39	C.B Point changing	0
40	changing of Head Light Bulb	7
41	Complete Electrical Wire Check Up	0
42	Cut Out Adjustment	7
43	Dynamo Armature Rewinding	777
44	Dynamo Overhauling	977
45	Fog Light New Fitting	147
46	Head Light Bulb changing each	7
47	Head Light changing each	47

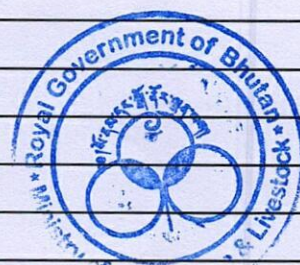 

48	Horn Adjustment/Fitting	97
49	Ignition Coil changing	0
50	Indicator Assembly changing each	0
51	Indicator Bulb changing	7
52	Indicator Glass changing each	0
53	Replacement of Electrical Switches	97
54	Replacement of Relays	47
55	Roof Lamp Bulb changing	7
56	Self Armature Rewinding	177
57	Self Starter Overhauling	147
58	Self Starter Removing and Refitting	747
59	Self Starter Repairing	977
60	Side Light Fitting	7
61	Wiper Arm and Blade changing	7
62	. Labour Charges (Steering Portion)	0
63	Kingpin Overhauling (one side)	7
64	Knuckle Oil Sealing changing	7
65	Power Steering Overhauling	777
66	Replacement of Pitman Arm	7
67	Steering Box Overhauling	377
68	Steering Yoke changing	7
69	Tid Rod End changing	297
70	Tube Repairing/Patching	197
71	Tyre Opening and Fitting	197
72	Wheel Alignment	397
73	Labour Charges (Transmission Portion)	0
74	Removing & Fitting of Spring Assy	677
75	Centre Bearing changing	7
76	Clutch Master Cylinder Kit changing	127
77	Clutch Master Cylinder Assembly changing	147
78	Clutch Plate changing	977
79	Cross Bearing Replacement each	477
80	Crown and Tail Fitting	1149
81	Differentail Overhauling/Remvoing & Refi	1277
82	Fly Wheel Bearing changing	147
83	Front Axle Oil Seal changing each wheel	197
84	Front Hub Oil Seal changing each wheel	197
85	Front Wheel Bearing changing	477
86	Gear Box Overhauling	1197
87	Gear Oil changing	177

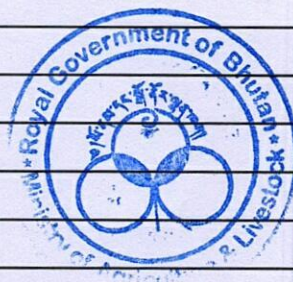 

88	Nipple Greasing with Grease	477
89	Hubs Greasing per wheel	377
90	Knuckle Oil changing	0
91	Pressure Plate changing	1277
92	Propeller Shaft Bolt Replacement	147
93	Propeller Shaft Cross Bearing changing ea	147
94	Rear Axle Oil Seal changing and Greasing	197
95	Rear Hub Oil Seal changing each wheel	147
96	Release Bearing changing	977
97	Gear Box removing and refitting	2277
98	Spring Bush changing complet	477
99	Spring Leafs changing	277
100	Tail Pinion Bearing changing	177
101	Tail Pinion Oil Seal changing	147
102	Wheel Bolt changing each wheel	127
103	Labour Charges (Brake Portion)	0
104	Adjustment of brake (one each)	127
105	Brake Booster Assembly changing	127
106	Brake Booster Kit changing	127
107	Brake Disc removing and refitting	477
108	Brake Disc turining/ facing	947
109	Brake Drum turning	947
110	Brake Linning changing	7
111	Brake Pad changing (1 side)	277
112	Brake Servicing each wheel	177
113	Brake Shoe changing rear wheel	197
114	Brake Master Cylinder changing	177
115	Brake Master Cylinder repair kit changing	127
116	Front Brake Calpier Kit changing	97
117	Gas Welding (per inch)	97
118	Hoot Stitching	0
119	Master Cylinder Assembly changing	47
120	Master Cylinder Kit changing	47
121	Number Plate Writing	377
122	Wheel Cyclinder	2977
123	W.C Kit changing each wheel front	7
124	Wheel Bearing changing and fitting	197
125	Wheel Bearing Rear changing	197
126	Break Light Assymbly	7
127	Labour Charges (Suspension Syetem	0

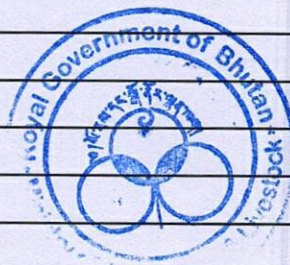 

128	Coil Spring changing	7
129	Complete Spring bush changing	0
130	Shacker Plate/Pin changing each	47
131	Shackle Absorber Mounting chaging	47
132	Shock Absorber Bush changing	177
133	Shock Absorber changing each (front)	277
134	Shock Absorber changing each (rear)	177
135	Spring Leaf changing (each spring)	347
136	Spring rearranging	377
137	Stablizer Bush changing each	47
138	Labour Charges (Exhaust System	0
139	Silencer Brake/Mounting changing	7
140	Silencer Box removing and refitting	47
		49989
Spare parts		338413
Services		49989
Total		388402

