 


Prado rates for 2025-2026		
Sl. no	Description of Item (2)	
		Kuenzom Automobile Workshop
1	Prado	0
2	VEHICLE PARTS	0
3	Air Filter	1997
4	Acelarator cable	7
5	Arm Bush Lower	947
6	Arm Bush upper	947
7	Arm Steering Knuckle	7
8	Arm Sub-Assy Pitman	7
9	Axle Cone (Rear)	677
10	Axel Oil Seal	947
11	Axel Packing	7
12	Back Light Bulb	47
13	Ball Joint Upper	2977
14	Ball Joint Lower	2977
15	Battery	8977
16	Bearing Center support	7
17	Bearing Different Inner	447
18	Bearing Diff. Side Gear	447
19	Bearing Fronnt Wheel Inner	7547
20	Bearing Front Wheel Outer	7
21	Bearing Rear Axle/Wheel	0
22	Bearing Set Connecting Rod	777
23	Bearing Set Crankshalft	677
24	Bearing Tall Pinion Outer	1247
25	Brake Booster Assy	12477
26	Brake Light Bulb (Double Point)	47
27	Brake Pad	15277
28	Brake Shoe Rear	9777
29	Bumper Light Assy (Front)	0
30	Bush Front Suspension (Lower LH)	847
31	Bush Front Suspension (Lower RH)	847
32	Bush Front Suspension (Upper RH/LH)	1247
33	Bush Rear Stabliher	447

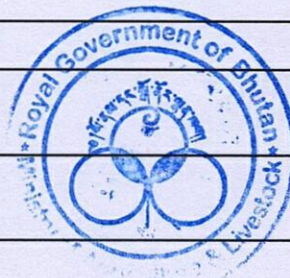




34	Cam Shaft Bearing	977
35	Camp Bearing	777
36	Cap Assy. Fuel Filter	7
37	Center Bolt	77
38	Clutch Plate	14777
39	Clutch release Bearing	5277
40	Bendix Pinion	4277
41	Cross Bearing	4977
42	CV Joint (Outer)	8277
43	CV Joint (Inner)	6277
44	Cylinder Assy brake master	13547
45	Cylinder Assy clutch master	4777
46	Cylinder Kit Brake master	1247
47	Cylinder Kit clutch Master	77
48	Cylinder Kit Front Disc Brake	7
49	Cylinder Kit Rear wheel	7
50	Deliver Valve	7
51	Diesel Filtter	1977
52	Dust Guard	7
53	End Sub Assy Tie Rod (LH)	3177
54	End Sub Assy Tie Rod (RH)	3177
55	Engine Liner	2777
56	Fan Belt	3177
57	Fan Sub-Assembly	7
58	Fly Ring Gear	7
59	Fog Lamp	2577
60	Foot Stand	7
61	Four Wheel Bearing	7
62	Front Wheel Check Nut	97
63	Front Wheel Check Nut Lock	97
64	Fuel Filter	0
65	Fuel Tank	0
66	Gasket Engine Overhaul	6477
67	Glass Back Light Assy LH/RH	7
68	Glass Back Light LH/RH	7
69	Glass Front Indicator LH/RH	7
70	Glow Plug	2477
71	Grille Radiater (Black)Show	7
72	Grille Radiater (Chrompated)	147





73	Hand Brake Cable (Front)	3177
74	Hand Brake Cable(Rear)	4277
75	Head and Rotor	0
76	Head Gasket	2777
77	Head lamp 3 pin	97
78	Head Lamp Assembly	7777
79	Horn	677
80	Indicator/Side Light bulb	7
81	Injector Nozzle	29777
82	Kilometer Cable	7
83	Kin Pin Bearing	77
84	Kin Pin Sim	7
85	Lamp assy Front Bumper LH	7
86	Lamp Assy Front Bumper RH	7
87	Lens Front Indicator/side Light LH	7
88	Lens Front Indicator/Side Light RH	7
89	Link Rod Washer	7
90	Lifter Valve	377
91	Main Bearing Oil Seal	727
92	Mirror LH/RH	4277
93	Oil Filter	1247
94	Oil Pump Gear Inner	0
95	Oil Pump Gear Outer	0
96	Oil Seal Cam Shaft	357
97	Oil Seal engine rear	477
98	oil Seal Front axle inner	777
99	Oil Seal Front Hub Outer	7
100	Oil seal Oil Axle Outer	777
101	Oil Seal Rear Inner	447
102	Oil Seal Tail Pinion	677
103	Oil Seal Valve Stem	97
104	Piston Ring	5777
105	Power Steering Oil	477
106	Power Steering Pump	16777
107	Pressure Plate	15777
108	Pump Service Kit	7
109	Radiator Cap	377
110	Radiator Assembly	16777

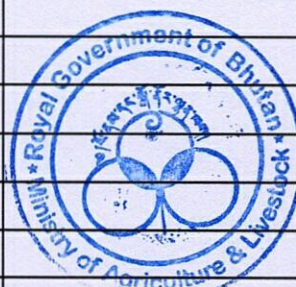 



111	Rain Guard	3277
112	Rear View mirror	477
113	Relay Glow Plug	877
114	Release Bearing	0
115	Seal oil Timing Gear case	547
116	Self Starter Armature	2777
117	Shock Absorber	0
118	Shock Absorber Bush (Front)	1247
119	Shock Absorber Front	5677
120	Shock Absorber Rear	3747
121	Shock Bush Lower/Upper	7
122	Shocker Washer	7
123	Silencer Assy	0
124	Silencer Pipe Holder Bush	147
125	Solenoid Switch (self)	4777
126	Spacer Rear Axle Bearing	2477
127	Spring Bush Front - Rubber	147
128	Spring Front Leaf 2nd	7
129	Spring Front Leaf 3rd	7
130	Spring Front Leaf 4th	7
131	Spring Front Leaf 5th	7
132	Spring Metal Bush	1877
133	Spring Front Leaf Main	7
134	Spring Mountain	7
135	Spring Rear Leaf 2nd	5277
136	Spring Rear Leaf 3rd	4277
137	Spring Rear Leaf 4th	3277
138	Spring Rear Leaf 5th	2777
139	Spring Rear Leaf Main	7977
140	Stabilizer Link Bush	177
141	Stabilizer Link Rod	2677
142	Stablizer Bush D type	577
143	Steering Damper	7
144	Steering Knuckle Kit	7
145	Steering Rack Assembly	49777
146	Steering Rod	7
147	Steering Yoke	3347
148	Suspension Arm Upper	1957
149	Suspension Arm Lower	1257
150	Thermostat Valve	1877






151	Thrust Washer	377
152	Tierod End	2977
153	Timing Belt	3177
154	Top sharp oil seal	377
155	Valve Exhaust	877
156	Valve External	977
157	Valve Guide	247
158	Valve Inlet	247
159	Valve Inner	7
160	Valve Seal	147
161	Valve Stem	277
162	Voltage Regulator	0
163	Water Pump Assembly	6747
164	Wheel Drum	0
165	Wheel Nut and Bolts (Front/Rear)	247
166	Wind Shields Glass	29777
167	Wiper Arm	7
168	Wiper Motor	477
169	Wiper Blade	0
170	Wiper Tank Motor	477
171	Extra Accessories	0
172	Brake Oil Dot 3 (350 ml)	477
173	Anabond Gum	97
174	Cloth	10
175	Coolant (per liter)	247
176	Dash Board Polish	337
177	Distilled Water	37
178	Engine Oil	407
179	Gear Box Oil Seal	777
180	Gear Oil	387
181	Grease	347
182	Power Steering Oil	477
183	Rope	7
184	Tail and Pinum Gear (Set) (4 Wheel) Front	0
185	Disel Filter	0
186	Seat Cover (Set)	9777
		453299



SL. no	Description of Services	
--------	-------------------------	--




		Kuenzom Automobile Workshop
1	Prado	0
2	Labour Charges (General)	0
3	Water Servicing and Air Servicing	447
4	Air Filter changing	7
5	Cam Shaft Oil Seal changing	247
6	Crank Shaft Grinding	2777
7	Engine Block Boring	2277
8	Engine Cleaning	7
9	Engine Head Removing and Refitting	2377
10	Engine Oil & Filter changing	297
11	Engine Overhauling 4 Cylinder Engine	2377
12	Engine Overhauling 6 Cylinder Engine	0
13	Engine Turning	1247
14	FIT Overhauling	0
15	Fuel Filter changing	247
16	Glow Plug changing	477
17	Head Gasket changing	1277
18	Main Bearing Oil Seal changing	377
19	Oil Pressure Switch changing	7
20	Oil Pump Gear changing	7
21	Piston Ring changing	477
22	Radiator Servicing (Removing & Refitting)	877
23	Replacement of Radiator Hose	147
24	Replacement of Thermostat Valve	7
25	Replacement of Fan Belt	197
26	Replacement of Injector Nozzle	377
27	Spark Plug changing or Servicing each	0
28	Tappet Adjustment	7
29	Tappet Cover Gasket changing	677
30	Timing Belt changing	677

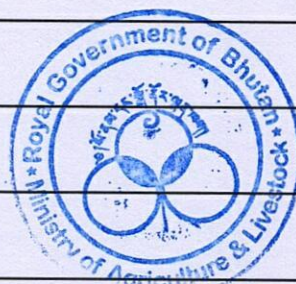 




31	Timing Gear Cover Oil Seal changing	97
32	Valve Facing each valve	77
33	Water Pump overhauling	97
34	Labour Charges (Electrical System)	0
35	Alternator Removing and Refitting/Overhauling	477
36	Alternator Repairing	997
37	Back Light changing each	7
38	Battery changing	7
39	C.B Point changing	0
40	changing of Head Light Bulb	7
41	Complete Electrical Wire Check Up	0
42	Cut Out Adjustment	7
43	Dynamo Armature Rewinding	777
44	Dynamo Overhauling	977
45	Fog Light New Fitting	147
46	Head Light Bulb changing each	7
47	Head Light changing each	47
48	Horn Adjustment/Fitting	97
49	Ignition Coil changing	0
50	Indicator Assembly changing each	0
51	Indicator Bulb changing	7
52	Indicator Glass changing each	0
53	Replacement of Electrical Switches	97
54	Replacement of Relays	47
55	Roof Lamp Bulb changing	7
56	Self Armature Rewinding	177
57	Self Starter Overhauling	147
58	Self Starter Removing and Refitting	747
59	Self Starter Repairing	977
60	Side Light Fitting	7
61	Wiper Arm and Blade changing	7

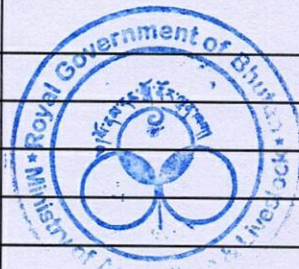 




62	. Labour Charges (Steering Portion)	0
63	Kingpin Overhauling (one side)	7
64	Knuckle Oil Sealing changing	7
65	Power Steering Overhauling	777
66	Replacement of Pitman Arm	7
67	Steering Box Overhauling	377
68	Steering Yoke changing	7
69	Tid Rod End changing	297
70	Tube Repairing/Patching	197
71	Tyre Opening and Fitting	197
72	Wheel Alignment	397
73	Labour Charges (Transmission Portion)	0
74	Removing & Fitting of Spring Assy	677
75	Centre Beairng changing	7
76	Clutch Master Cylinder Kit changing	127
77	Clutch Master Cylinder Assembly changing	147
78	Clutch Plate changing	977
79	Cross Bearing Replacement each	477
80	Crown and Tail Fitting	1149
81	Differentail Overhauling/Remvoing & Refitting	1277
82	Fly Wheel Bearing changing	147
83	Front Axle Oil Seal changing each wheel	197
84	Front Hub Oil Seal changing each wheel	197
85	Front Wheel Bearing changing	477
86	Gear Box Overhauling	1197
87	Gear Oil changing	177
88	Nipple Greasing with Grease	477
89	Hubs Greasing per wheel	377
90	Knuckle Oil changing	0
91	Pressure Plate changing	1277

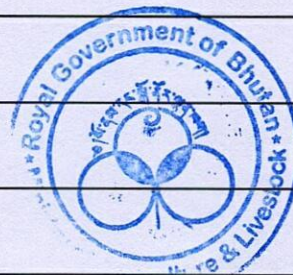 



92	Propeller Shaft Bolt Replacement	147
93	Propeller Shaft Cross Bearing changing each	147
94	Rear Axle Oil Seal changing and Greasing each	197
95	Rear Hub Oil Seal changing each wheel	147
96	Release Bearing changing	977
97	Gear Box removing and refitting	2277
98	Spring Bush changing complet	477
99	Spring Leafs changing	277
100	Tail Pinion Bearing changing	177
101	Tail Pinion Oil Seal changing	147
102	Wheel Bolt changing each wheel	127
103	Labour Charges (Brake Portion)	0
104	Adjustment of brake (one each)	127
105	Brake Booster Assembly changing	127
106	Brake Booster Kit changing	127
107	Brake Disc removing and refitting	477
108	Brake Disc turning/ facing	947
109	Brake Drum turning	947
110	Brake Lining changing	7
111	Brake Pad changing (1 side)	277
112	Brake Servicing each wheel	177
113	Brake Shoe changing rear wheel	197
114	Brake Master Cylinder changing	177
115	Brake Master Cylinder repair kit changing	127
116	Front Brake Calpier Kit changing	97
117	Gas Welding (per inch)	97
118	Hoot Stitching	0
119	Master Cylinder Assembly changing	47

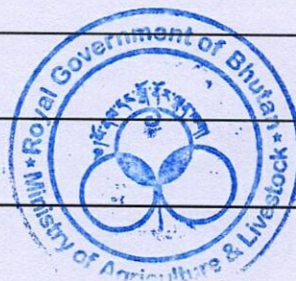 



120	Master Cylinder Kit changing	47
121	Number Plate Writing	377
122	Wheel Cyclinder	2977
123	W.C Kit changing each wheel front	7
124	Wheel Bearing changing and fitting	197
125	Wheel Bearing Rear changing	197
126	Break Light Assymby	7
127	Labour Charges (Suspension Syetem	0
128	Coil Spring changing	7
129	Complete Spring bush changing	447
130	Shacker Plate/Pin changing each	47
131	Shackle Absorber Mounting chaging	47
132	Shock Absorber Bush changing	177
133	Shock Absorber changing each (front)	277
134	Shock Absorber changing each (rear)	177
135	Spring Leaf changing (each spring)	347
136	Spring rearranging	377
137	Stablizer Bush changing each	47
138	Labour Charges (Exhaust System	0
139	Silencer Brake/Mounting changing	7
140	Silencer Box removing and refitting	47
		50436
Spare parts		453299
Services		50436
Total		503735

