 
 



Isuzu V-cross for 2025-2026		
Sl. No	Description of Item (2)	
		Kuenzom Automobile Workshop
1	Isuzu V-cross	0
2	VEHICLE PARTS	0
3	Air Filter	1677
4	Acelarator cable	0
5	Arm Bush Lower	947
6	Arm Bush upper	947
7	Arm Steering Knuckle	7
8	Arm Sub-Assy Pitman	7
9	Axle Cone (Rear)	777
10	Axel Oil Seal	247
11	Axel Packing	7
12	Back Light Bulb	47
13	Ball Joint Upper	1877
14	Ball Joint Lower	2144
15	Battery	8977
16	Bearing Center support	7
17	Bearing Different Inner	447
18	Bearing Diff. Side Gear	457
19	Bearing Fronnt Wheel Inner	1377
20	Bearing Front Wheel Outer	1477
21	Bearing Rear Axle/Wheel	2177
22	Bearing Set Connecting Rod	2177
23	Bearing Set Crankshalft	1247
24	Bearing Tall Pinion Outer	977
25	Brake Booster Assy	13547
26	Brake Light Bulb (Double Point)	47
27	Brake Pad	7377
28	Brake Shoe Rear	5777
29	Bumper Light Assy (Front)	377
30	Bush Front Suspension (Lower LH)	447

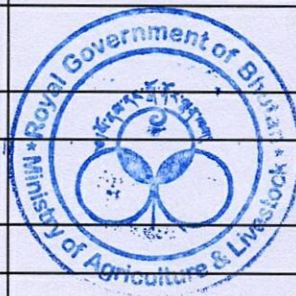


31	Bush Front Suspension (Lower RH)	447
32	Bush Front Suspension (Upper RH/LH)	457
33	Bush Rear Stabilizer	277
34	Cam Shaft Bearing	777
35	Cam Bearing	7
36	Cap Assy. Fuel Filter	877
37	Center Bolt	87
38	Clutch Plate	6777
39	Clutch release Bearing	2777
40	Bendix Pinion	3877
41	Cross Bearing	3477
42	CV Joint (Outer)	4277
43	CV Joint (Inner)	3277
44	Cylinder Assy brake master	9877
45	Cylinder Assy clutch master	4277
46	Cylinder Kit Brake master	1677
47	Cylinder Kit clutch Master	1377
48	Cylinder Kit Front Disc Brake	127
49	Cylinder Kit Rear wheel	7
50	Deliver Valve	7
51	Diesel Filter	927
52	Dust Guard	447
53	End Sub Assy Tie Rod (LH)	1777
54	End Sub Assy Tie Rod (RH)	1677
55	Engine Liner	2177
56	Fan Belt	3277
57	Fan Sub-Assembly	7
58	Fly Ring Gear	7
59	Fog Lamp	1277
60	Foot Stand	7
61	Four Wheel Bearing	7
62	Front Wheel Check Nut	127

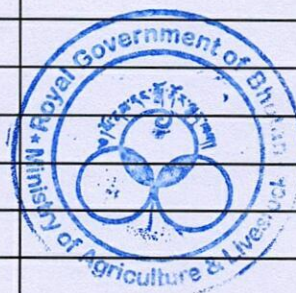


63	Front Wheel Check Nut Lock	127
64	Fuel Filter	0
65	Fuel Tank	0
66	Gasket Engine Overhaul	4277
67	Glass Back Light Assy LH/RH	7
68	Glass Back Light LH/RH	4777
69	Glass Front Indicator LH/RH	7
70	Glow Plug	1247
71	Grille Radiater (Black)Show	7
72	Grille Radiater (Chrompated)	2177
73	Hand Brake Cable (Front)	1977
74	Hand Brake Cable(Rear)	1677
75	Head and Rotor	0
76	Head Gasket	2977
77	Head lamp 3 pin	97
78	Head Lamp Assembly	7877
79	Horn	677
80	Indicator/Side Light bulb	47
81	Injector Nozzle	19777
82	Kilometer Cable	7
83	Kin Pin Bearing	7
84	Kin Pin Sim	7
85	Lamp assy Front Bumper LH	1247
86	Lamp Assy Front Bumper RH	1247
87	Lens Front Indicator/side Light LH	7
88	Lens Front Indicator/Side Light RH	7
89	Link Rod Washer	47
90	Lifter Valve	377

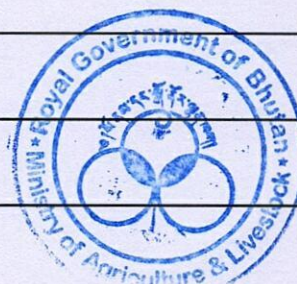 


91	Main Bearing Oil Seal	1177
92	Mirror LH/RH	2977
93	Oil Filter	1877
94	Oil Pump Gear Inner	7
95	Oil Pump Gear Outer	7
96	Oil Seal Cam Shaft	397
97	Oil Seal engine rear	477
98	oil Seal Front axle inner	7
99	Oil Seal Front Hub Outer	1247
100	Oil seal Oil Axle Outer	437
101	Oil Seal Rear Inner	327
102	Oil Seal Tail Pinion	727
103	Oil Seal Valve Stem	127
104	Piston Ring	1377
105	Power Steering Oil	497
106	Power Steering Pump	3277
107	Pressure Plate	9777
108	Pump Service Kit	1247
109	Radiator Cap	677
110	Radiator Assembly	16777
111	Rain Guard	3277
112	Rear View mirror	677
113	Relay Glow Plug	127
114	Release Bearing	1877
115	Seal oil Timing Gear case	477
116	Self Starter Armature	2777
117	Shock Absorber	0
118	Shock Absorber Bush (Front)	1247
119	Shock Absorber Front	5277
120	Shock Absorber Rear	3747
121	Shock Bush Lower/Upper	7
122	Shocker Washer	7
123	Silencer Assy	7
124	Silencer Pipe Holder Bush	147
125	Solenoid Switch (self)	4277

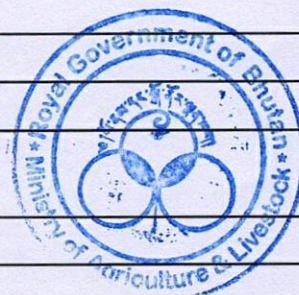 

126	Spacer Rear Axle Bearing	2747
127	Spring Bush Front - Rubber	147
128	Spring Front Leaf 2nd	7
129	Spring Front Leaf 3rd	7
130	Spring Front Leaf 4th	7
131	Spring Front Leaf 5th	7
132	Spring Metal Bush	7
133	Spring Front Leaf Main	7
134	Spring Mountain	7
135	Spring Rear Leaf 2nd	5377
136	Spring Rear Leaf 3rd	3377
137	Spring Rear Leaf 4th	3277
138	Spring Rear Leaf 5th	3177
139	Spring Rear Leaf Main	5377
140	Stabilizer Link Bush	147
141	Stabilizer Link Rod	977
142	Stablizer Bush D type	547
143	Steering Damper	0
144	Steering Knuckle Kit	7
145	Steering Rack Assembly	25477
146	Steering Rod	7
147	Steering Yoke	7
148	Suspension Arm Upper	6177
149	Suspension Arm Lower	7177
150	Thermostat Valve	1477
151	Thrust Washer	477
152	Tierod End	2977
153	Timing Belt	0
154	Top sharp oil seal	377
155	Valve Exhaust	477
156	Valve External	477
157	Valve Guide	347
158	Valve Inlet	377
159	Valve Inner	7
160	Valve Seal	7
161	Valve Stem	277
162	Voltage Regulator	0
163	Water Pump Assembly	4777

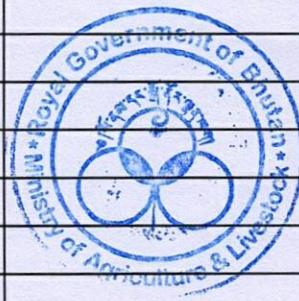 


164	Wheel Drum	3277
165	Wheel Nut and Bolts (Front/Rear)	247
166	Wind Shields Glass	16777
167	Wiper Arm	177
168	Wiper Motor	247
169	Wiper Blade	677
170	Wiper Tank Motor	377
171	Extra Accessories	0
172	Brake Oil Dot 3 (350 ml)	397
173	Anabond Gum	97
174	Cloth	10
175	Coolant (per liter)	247
176	Dash Board Polish	337
177	Distilled Water	37
178	Engine Oil	877
179	Gear Box Oil Seal	647
180	Gear Oil	377
181	Grease	348
182	Power Steering Oil	527
183	Rope	7
184	Tail and Pinum Gear (Set) (4 Wheel) Front	7
185	Disel Filter	0
186	Seat Cover (Set)	9777
		341639
Sl. No	Description of Services	
		Kuenzom Automobile Workshop
1	Isuzu V-cross	0
2		0
3	Water Servicing and Air Servicing	447
4	Air Filter changing	7
5	Cam Shaft Oil Seal changing	247
6	Crank Shaft Grinding	2777
7	Engine Block Boring	2277
8	Engine Cleaning	7

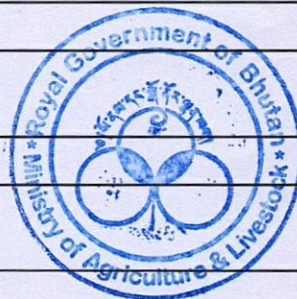 

9	Engine Head Removing and Refitting	2377
10	Engine Oil & Filter changing	297
11	Engine Overhauling 4 Cylinder Engine	2377
12	Engine Overhauling 6 Cylinder Engine	0
13	Engine Turning	1247
14	FIT Overhauling	0
15	Fuel Filter changing	247
16	Glow Plug changing	477
17	Head Gasket changing	1277
18	Main Bearing Oil Seal changing	377
19	Oil Pressure Switch changing	7
20	Oil Pump Gear changing	7
21	Piston Ring changing	477
22	Radiator Servicing (Removing & Refetting)	877
23	Replacement of Radiator Hose	147
24	Replacement of Thermostat Valve	7
25	Replacement of Fan Belt	197
26	Replacement of Injector Nozzle	377
27	Spark Plug changing or Servicing each	0
28	Tappet Adjustment	7
29	Tappet Cover Gasket changing	677
30	Timing Belt changing	677
31	Timing Gear Cover Oil Seal changing	97
32	Valve Facing each valve	77
33	Water Pump overhauling	97




34	Labour Charges (Electrical System)	0
35	Alternator Removing and Refitting/Overhauling	477
36	Alternator Repairing	997
37	Back Light changing each	7
38	Battery changing	7
39	C.B Point changing	0
40	changing of Head Light Bulb	7
41	Complete Electrical Wire Check Up	0
42	Cut Out Adjustment	7
43	Dynamo Armature Rewinding	777
44	Dynamo Overhauling	977
45	Fog Light New Fitting	147
46	Head Light Bulb changing each	7
47	Head Light changing each	47
48	Horn Adjustment/Fitting	97
49	Ignition Coil changing	0
50	Indicator Assembly changing each	0
51	Indicator Bulb changing	7
52	Indicator Glass changing each	0
53	Replacement of Electrical Switches	97
54	Replacement of Relays	47
55	Roof Lamp Bulb changing	7
56	Self Armature Rewinding	177
57	Self Starter Overhauling	147
58	Self Starter Removing and Refitting	747
59	Self Starter Repairing	977

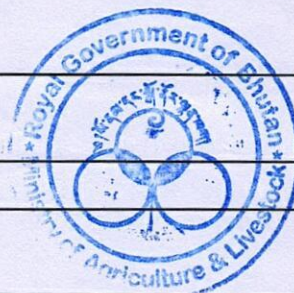 


60	Side Light Fitting	7
61	Wiper Arm and Blade changing	7
62	. Labour Charges (Steering Portion)	0
63	Kingpin Overhauling (one side)	7
64	Knuckle Oil Sealing changing	7
65	Power Steering Overhauling	777
66	Replacement of Pitman Arm	7
67	Steering Box Overhauling	377
68	Steering Yoke changing	7
69	Tid Rod End changing	297
70	Tube Repairing/Patching	197
71	Tyre Opening and Fitting	197
72	Wheel Alignment	397
73	Labour Charges (Transmission Portion)	0
74	Removing & Fitting of Spring Assy	677
75	Centre Bearing changing	7
76	Clutch Master Cylinder Kit changing	127
77	Clutch Master Cylinder Assembly changing	147
78	Clutch Plate changing	977
79	Cross Bearing Replacement each	477
80	Crown and Tail Fitting	1149
81	Differential Overhauling/Remvoing & Refitting	1277
82	Fly Wheel Bearing changing	147
83	Front Axle Oil Seal changing each wheel	197



84	Front Hub Oil Seal changing each wheel	197
85	Front Wheel Bearing changing	477
86	Gear Box Overhauling	1197
87	Gear Oil changing	177
88	Nipple Greasing with Grease	477
89	Hubs Greasing per wheel	377
90	Knuckle Oil changing	0
91	Pressure Plate changing	1277
92	Propeller Shaft Bolt Replacement	147
93	Propeller Shaft Cross Bearing changing each	147
94	Rear Axle Oil Seal changing and Greasing each	197
95	Rear Hub Oil Seal changing each wheel	147
96	Release Bearing changing	977
97	Gear Box removing and refitting	2277
98	Spring Bush changing complet	477
99	Spring Leafs changing	277
100	Tail Pinion Bearing changing	177
101	Tail Pinion Oil Seal changing	147
102	Wheel Bolt changing each wheel	127
103	Labour Charges (Brake Portion)	0
104	Adjustment of brake (one each)	127
105	Brake Booster Assembly changing	127
106	Brake Booster Kit changing	127
107	Brake Disc removing and refitting	477

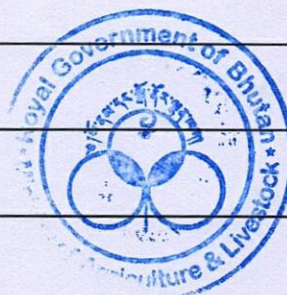 

108	Brake Disc turning/ facing	947
109	Brake Drum turning	947
110	Brake Lining changing	7
111	Brake Pad changing (1 side)	277
112	Brake Servicing each wheel	177
113	Brake Shoe changing rear wheel	197
114	Brake Master Cylinder changing	177
115	Brake Master Cylinder repair kit changing	127
116	Front Brake Caliper Kit changing	97
117	Gas Welding (per inch)	97
118	Hoot Stitching	0
119	Master Cylinder Assembly changing	47
120	Master Cylinder Kit changing	47
121	Number Plate Writing	377
122	Wheel Cylinder	2977
123	W.C Kit changing each wheel front	7
124	Wheel Bearing changing and fitting	197
125	Wheel Bearing Rear changing	197
126	Break Light Assembly	7
127	Labour Charges (Suspension System)	0
128	Coil Spring changing	7
129	Complete Spring bush changing	0
130	Shackle Plate/Pin changing each	47
131	Shackle Absorber Mounting changing	47
132	Shock Absorber Bush changing	177

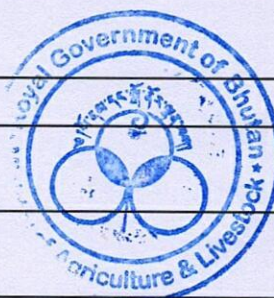 

133	Shock Absorber changing each (front)	277
134	Shock Absorber changing each (rear)	177
135	Spring Leaf changing (each spring)	347
136	Spring rearranging	377
137	Stablizer Bush changing each	47
138	Labour Charges (Exhaust System	0
139	Silencer Brake/Mounting changing	7
140	Silencer Box removing and refitting	47
		49989
Spare parts		341639
Services		49989
Total		391628

