 
 


Hilux Vigo rates for 2025-2026			
Sl. No	Item	Unit	
			Kuenzom Automobile Workshop
1	Hilux Vigo	No	0
2	VEHICLE PARTS	No	0
3	Air Filter	No	1777
4	Acelarator cable	No	7
5	Arm Bush Lower	No	947
6	Arm Bush upper	No	947
7	Arm Steering Knuckle	No	7
8	Arm Sub-Assy Pitman	No	7
9	Axle Cone (Rear)	No	677
10	Axel Oil Seal	No	677
11	Axel Packing	No	7
12	Back Light Bulb	No	47
13	Ball Joint Upper	No	2477
14	Ball Joint Lower	No	2477
15	Battery	No	8977
16	Bearing Center support	No	7
17	Bearing Different Inner	No	447
18	Bearing Diff. Side Gear	No	447
19	Bearing Fronnt Wheel Inner	No	7547
20	Bearing Front Wheel Outer	No	7
21	Bearing Rear Axle/Wheel	No	0
22	Bearing Set Connecting Rod	No	777
23	Bearing Set Crankshalft	No	677
24	Bearing Tall Pinion Outer	No	877
25	Brake Booster Assy	No	13477
26	Brake Light Bulb (Double Point)	No	47
27	Brake Pad	No	12977
28	Brake Shoe Rear	No	9777
29	Bumper Light Assy (Front)	No	0
30	Bush Front Suspension (Lower LH)	No	847
31	Bush Front Suspension (Lower RH)	No	847
32	Bush Front Suspension (Upper RH/LH)	No	1247
33	Bush Rear Stabliher	No	447
34	Cam Shaft Bearing	No	677

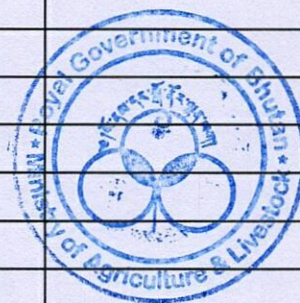


35	Camp Bearing	No	577
36	Cap Assy. Fuel Filter	No	7
37	Center Bolt	No	77
38	Clutch Plate	No	12777
39	Clutch release Bearing	No	3247
40	Bendix Pinion	No	3977
41	Cross Bearing	No	4277
42	CV Joint (Outer)	No	8277
43	CV Joint (Inner)	No	6277
44	Cylinder Assy brake master	No	9877
45	Cylinder Assy clutch master	No	4777
46	Cylinder Kit Brake master	No	1247
47	Cylinder Kit clutch Master	No	77
48	Cylinder Kit Front Disc Brake	No	7
49	Cylinder Kit Rear wheel	No	7
50	Deliver Valve	No	7
51	Diesel Filtter	No	827
52	Dust Guard	No	7
53	End Sub Assy Tie Rod (LH)	No	2977
54	End Sub Assy Tie Rod (RH)	No	2977
55	Engine Liner	No	1877
56	Fan Belt	No	2977
57	Fan Sub-Assembly	No	7
58	Fly Ring Gear	No	7
59	Fog Lamp	No	1677
60	Foot Stand	No	7
61	Four Wheel Bearing	No	7
62	Front Wheel Check Nut	No	97
63	Front Wheel Check Nut Lock	No	97
64	Fuel Filter	No	0
65	Fuel Tank	No	0
66	Gasket Engine Overhaul	No	4777
67	Glass Back Light Assy LH/RH	No	7
68	Glass Back Light LH/RH	No	7
69	Glass Front Indicator LH/RH	No	7
70	Glow Plug	No	2477
71	Grille Radiater (Black)Show	No	7
72	Grille Radiater (Chrompated)	No	147
73	Hand Brake Cable (Front)	No	3177
74	Hand Brake Cable(Rear)	No	4277

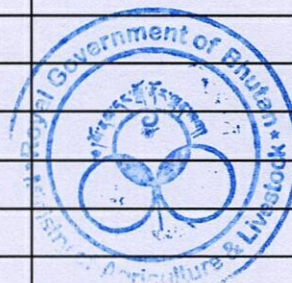


75	Head and Rotor	No	0
76	Head Gasket	No	2777
77	Head lamp 3 pin	No	97
78	Head Lamp Assembly	No	7777
79	Horn	No	677
80	Indicator/Side Light bulb	No	7
81	Injector Nozzle	No	29777
82	Kilometer Cable	No	7
83	Kin Pin Bearing	No	77
84	Kin Pin Sim	No	7
85	Lamp assy Front Bumper LH	No	7
86	Lamp Assy Front Bumper RH	No	7
87	Lens Front Indicator/side Light LH	No	7
88	Lens Front Indicator/Side Light RH	No	7
89	Link Rod Washer	No	7
90	Lifter Valve	No	377
91	Main Bearing Oil Seal	No	727
92	Mirror LH/RH	No	1877
93	Oil Filter	No	847
94	Oil Pump Gear Inner	No	0
95	Oil Pump Gear Outer	No	0
96	Oil Seal Cam Shaft	No	357
97	Oil Seal engine rear	No	477
98	oil Seal Front axle inner	No	777
99	Oil Seal Front Hub Outer	No	7
100	Oil seal Oil Axle Outer	No	777
101	Oil Seal Rear Inner	No	447
102	Oil Seal Tail Pinion	No	677
103	Oil Seal Valve Stem	No	97
104	Piston Ring	No	1677
105	Power Steering Oil	No	477
106	Power Steering Pump	No	14777
107	Pressure Plate	No	12777
108	Pump Service Kit	No	7
109	Radiator Cap	No	377
110	Radiator Assembly	No	16277
111	Rain Guard	No	7
112	Rear View mirror	No	477
113	Relay Glow Plug	No	877

114	Release Bearing	No	0
115	Seal oil Timing Gear case	No	547
116	Self Starter Armature	No	2777
117	Shock Absorber	No	0
118	Shock Absorber Bush (Front)	No	1247
119	Shock Absorber Front	No	6277
120	Shock Absorber Rear	No	4877
121	Shock Bush Lower/Upper	No	7
122	Shocker Washer	No	7
123	Silencer Assy	No	0
124	Silencer Pipe Holder Bush	No	147
125	Solenoid Switch (self)	No	3277
126	Spacer Rear Axle Bearing	No	1257
127	Spring Bush Front - Rubber	No	147
128	Spring Front Leaf 2nd	No	7
129	Spring Front Leaf 3rd	No	7
130	Spring Front Leaf 4th	No	7
131	Spring Front Leaf 5th	No	7
132	Spring Metal Bush	No	1877
133	Spring Front Leaf Main	No	7
134	Spring Mountain	No	7
135	Spring Rear Leaf 2nd	No	5277
136	Spring Rear Leaf 3rd	No	4277
137	Spring Rear Leaf 4th	No	3277
138	Spring Rear Leaf 5th	No	2777
139	Spring Rear Leaf Main	No	7977
140	Stabilizer Link Bush	No	177
141	Stabilizer Link Rod	No	2257
142	Stablizer Bush D type	No	577
143	Steering Damper	No	7
144	Steering Knuckle Kit	No	7
145	Steering Rack Assembly	No	56777
146	Steering Rod	No	7
147	Steering Yoke	No	3347
148	Suspension Arm Upper	No	5277
149	Suspension Arm Lower	No	4277
150	Thermostat Valve	No	1877
151	Thrust Washer	No	377
152	Tierod End	No	2977
153	Timing Belt	No	3177

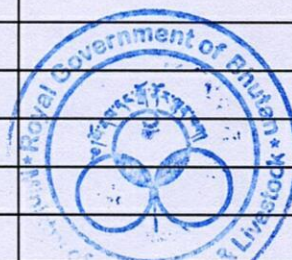 


154	Top sharp oil seal	No	377
155	Valve Exhaust	No	877
156	Valve External	No	977
157	Valve Guide	No	247
158	Valve Inlet	No	247
159	Valve Inner	No	7
160	Valve Seal	No	147
161	Valve Stem	No	277
162	Voltage Regulator	No	0
163	Water Pump Assembly	No	5277
164	Wheel Drum	No	0
165	Wheel Nut and Bolts (Front/Rear)	No	247
166	Wind Shields Glass	No	26547
167	Wiper Arm	No	7
168	Wiper Motor	No	477
169	Wiper Blade	No	0
170	Wiper Tank Motor	No	477
171	Extra Accessories	No	0
172	Brake Oil Dot 3 (350 ml)	No	477
173	Anabond Gum	No	97
174	Cloth	No	10
175	Coolant (per liter)	No	247
176	Dash Board Polish	No	337
177	Distilled Water	No	37
178	Engine Oil	No	407
179	Gear Box Oil Seal	No	777
180	Gear Oil	No	387
181	Grease	No	347
182	Power Steering Oil	No	477
183	Rope	No	7
184	Tail and Pinum Gear (Set) (4 Wheel) Front	No	0
185	Disel Filter	No	0
186	Seat Cover (Set)	No	9777
			427249

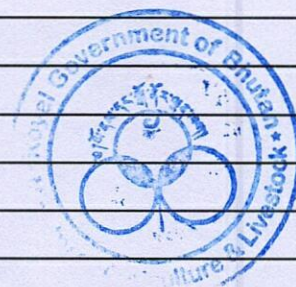 


SL. No	Services	Unit	
			Kuenzom Automobile Workshop
1	Hilux Vigo	No	0
2	Labour Charges (General)	No	0


3	Water Servicing and Air Servicing	No	447
4	Air Filter changing	No	7
5	Cam Shaft Oil Seal changing	No	247
6	Crank Shaft Grinding	No	2777
7	Engine Block Boring	No	2277
8	Engine Cleaning	No	7
9	Engine Head Removing and Refitting	No	2377
10	Engine Oil & Filter changing	No	297
11	Engine Overhauling 4 Cylinder Engine	No	2377
12	Engine Overhauling 6 Cylinder Engine	No	0
13	Engine Turning	No	1247
14	FIT Overhauling	No	0
15	Fuel Filter changing	No	247
16	Glow Plug changing	No	477
17	Head Gasket changing	No	1277
18	Main Bearing Oil Seal changing	No	377
19	Oil Pressure Switch changing	No	7
20	Oil Pump Gear changing	No	7
21	Piston Ring changing	No	477
22	Radiator Servicing (Removing & Refitting)	No	877
23	Replacement of Radiator Hose	No	147
24	Replacement of Thermostat Valve	No	7
25	Replacement of Fan Belt	No	197
26	Replacement of Injector Nozzle	No	377
27	Spark Plug changing or Servicing each	No	0
28	Tappet Adjustment	No	7
29	Tappet Cover Gasket changing	No	677
30	Timing Belt changing	No	677
31	Timing Gear Cover Oil Seal changing	No	97
32	Valve Facing each valve	No	77
33	Water Pump overhauling	No	97

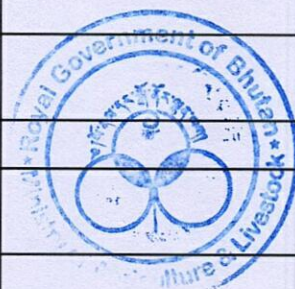 


34	Labour Charges (Electrical System)	No	0
35	Alternator Removing and Refitting/Overhauling	No	477
36	Alternator Repairing	No	997
37	Back Light changing each	No	7
38	Battery changing	No	7
39	C.B Point changing	No	0
40	changing of Head Light Bulb	No	7
41	Complete Electrical Wire Check Up	No	0
42	Cut Out Adjustment	No	7
43	Dynamo Armature Rewinding	No	777
44	Dynamo Overhauling	No	977
45	Fog Light New Fitting	No	147
46	Head Light Bulb changing each	No	7
47	Head Light changing each	No	47
48	Horn Adjustment/Fitting	No	97
49	Ignition Coil changing	No	0
50	Indicator Assembly changing each	No	0
51	Indicator Bulb changing	No	7
52	Indicator Glass changing each	No	0
53	Replacement of Electrical Switches	No	97
54	Replacement of Relays	No	47
55	Roof Lamp Bulb changing	No	7
56	Self Armature Rewinding	No	177
57	Self Starter Overhauling	No	147
58	Self Starter Removing and Refitting	No	747
59	Self Starter Repairing	No	977
60	Side Light Fitting	No	7
61	Wiper Arm and Blade changing	No	7
62	Labour Charges (Steering Portion)	No	0
63	Kingpin Overhauling (one side)	No	7
64	Knuckle Oil Sealing changing	No	7
65	Power Steering Overhauling	No	777

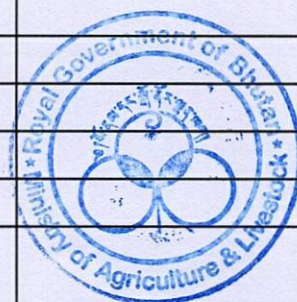 

66	Replacement of Pitman Arm	No	7
67	Steering Box Overhauling	No	377
68	Steering Yoke changing	No	7
69	Tid Rod End changing	No	297
70	Tube Repairing/Patching	No	197
71	Tyre Opening and Fitting	No	197
72	Wheel Alignment	No	397
73	Labour Charges (Transmission Portion)	No	0
74	Removing & Fitting of Spring Assy	No	677
75	Centre Bearng changing	No	7
76	Clutch Master Cylinder Kit changing	No	127
77	Clutch Master Cylinder Assembly changing	No	147
78	Clutch Plate changing	No	977
79	Cross Bearing Replacement each	No	477
80	Crown and Tail Fitting	No	1149
81	Differentail Overhauling/Remvoing & Refitting	No	1277
82	Fly Wheel Bearing changing	No	147
83	Front Axle Oil Seal changing each wheel	No	197
84	Front Hub Oil Seal changing each wheel	No	197
85	Front Wheel Bearing changing	No	477
86	Gear Box Overhauling	No	1197
87	Gear Oil changing	No	177
88	Nipple Greasing with Grease	No	477
89	Hubs Greasing per wheel	No	377
90	Knuckle Oil changing	No	0
91	Pressure Plate changing	No	1277
92	Propeller Shaft Bolt Replacement	No	147
93	Properller Shaft Cross Bearing changing each	No	147
94	Rear Axle Oil Seal changing and Greasing each	No	197
95	Rear Hub Oil Seal changing each wheel	No	147

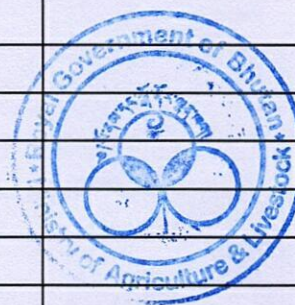 

96	Release Bearing changing	No	977
97	Gear Box removing and refitting	No	2277
98	Spring Bush changing complet	No	477
99	Spring Leafs changing	No	277
100	Tail Pinion Bearing changing	No	177
101	Tail Pinion Oil Seal changing	No	147
102	Wheel Bolt changing each wheel	No	127
103	Labour Charges (Brake Portion)	No	0
104	Adjustment of brake (one each)	No	127
105	Brake Booster Assembly changing	No	127
106	Brake Booster Kit changing	No	127
107	Brake Disc removing and refitting	No	477
108	Brake Disc turining/ facing	No	947
109	Brake Drum turning	No	947
110	Brake Linning changing	No	7
111	Brake Pad changing (1 side)	No	277
112	Brake Servicing each wheel	No	177
113	Brake Shoe changing rear wheel	No	197
114	Brake Master Cylinder changing	No	177
115	Brake Master Cylinder repair kit changing	No	127
116	Front Brake Calpier Kit changing	No	97
117	Gas Welding (per inch)	No	97
118	Hoot Stitching	No	0
119	Master Cylinder Assembly changing	No	47
120	Master Cylinder Kit changing	No	47
121	Number Plate Writing	No	377
122	Wheel Cyclinder	No	2977
123	W.C Kit changing each wheel front	No	7
124	Wheel Bearing changing and fitting	No	197
125	Wheel Bearing Rear changing	No	197

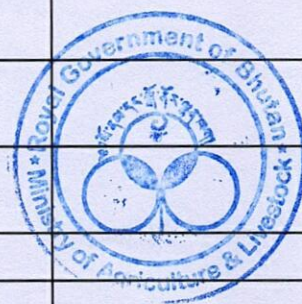 

126	Break Light Assymby	No	7
127	Labour Charges (Suspension Syetem	No	0
128	Coil Spring changing	No	7
129	Complete Spring bush changing	No	0
130	Shacker Plate/Pin changing each	No	47
131	Shackle Absorber Mounting chaging	No	47
132	Shock Absorber Bush changing	No	177
133	Shock Absorber changing each (front)	No	277
134	Shock Absorber changing each (rear)	No	177
135	Spring Leaf changing (each spring)	No	347
136	Spring rearranging	No	377
137	Stablizer Bush changing each	No	47
138	Labour Charges (Exhaust System	No	0
139	Silencer Brake/Mounting changing	No	7
140	Silencer Box removing and refitting	No	47
			49989
	Spare parts		427249
	Services		49989
	Total		477238

