 
 


Eco-Versa rates for (2025- 2026)

SL. NO	Item	Unit	
			Kuenzom Automobile Workshop
1	Eco- Versa	No	0
2	Labour Charges (General)	No	0
3	Air Filter	No	377
4	Acelarator cable	No	227
5	Arm Bush Lower	No	1
6	Arm Bush upper	No	1
7	Arm Steering Knuckle	No	1
8	Arm Sub-Assy Pitman	No	1
9	Axle Cone (Rear)	No	147
10	Axel Oil Seal	No	97
11	Axel Packing	No	7
12	Back Light Bulb	No	17
13	Ball Joint Upper	No	1
14	Ball Joint Lower	No	1
15	Battery	No	4427
16	Bearing Center support	No	7
17	Bearing Different Inner	No	127
18	Bearing Diff. Side Gear	No	247
19	Bearing Fronnt Wheel Inner	No	227
20	Bearing Front Wheel Outer	No	247
21	Bearing Rear Axle/Wheel	No	2177
22	Bearing Set Connecting Rod	No	427
23	Bearing Set Crankshalft	No	227
24	Bearing Tall Pinion Outer	No	227
25	Brake Booster Assy	No	6777
26	Brake Light Bulb (Double Point)	No	47
27	Brake Pad	No	1677
28	Brake Shoe Rear	No	2277
29	Bumper Light Assy (Front)	No	7
30	Bush Front Suspension (Lower LH)	No	7
31	Bush Front Suspension (Lower RH)	No	7
32	Bush Front Suspension (Upper RH/LH)	No	7

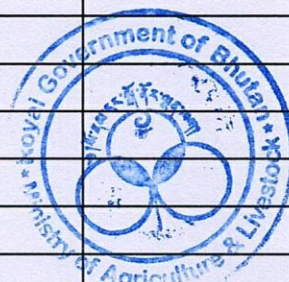


33	Bush Rear Stabiliser	No	7
34	Cam Shaft Bearing	No	377
35	Cam Bearing	No	7
36	Cap Assy. Fuel Filter	No	7
37	Center Bolt	No	57
38	Clutch Plate	No	1377
39	Clutch release Bearing	No	677
40	Bendix Pinion	No	1477
41	Cross Bearing	No	677
42	CV Joint (Outer)	No	7
43	CV Joint (Inner)	No	7
44	Cylinder Assy brake master	No	1147
45	Cylinder Assy clutch master	No	977
46	Cylinder Kit Brake master	No	7
47	Cylinder Kit clutch Master	No	7
48	Cylinder Kit Front Disc Brake	No	7
49	Cylinder Kit Rear wheel	No	7
50	Deliver Valve	No	7
51	Diesel Filter	No	7
52	Dust Guard	No	377
53	End Sub Assy Tie Rod (LH)	No	347
54	End Sub Assy Tie Rod (RH)	No	347
55	Engine Liner	No	877
56	Fan Belt	No	207
57	Fan Sub-Assembly	No	7
58	Fly Ring Gear	No	477
59	Fog Lamp	No	777
60	Foot Stand	No	7
61	Four Wheel Bearing	No	0
62	Front Wheel Check Nut	No	247
63	Front Wheel Check Nut Lock	No	7
64	Fuel Filter	No	547
65	Fuel Tank	No	147
66	Gasket Engine Overhaul	No	777
67	Glass Back Light Assy LH/RH	No	7
68	Glass Back Light LH/RH	No	7
69	Glass Front Indicator LH/RH	No	7
70	Glow Plug	No	7

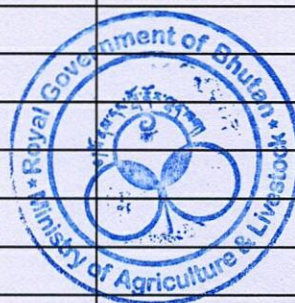


71	Grille Radiater (Black)Show	No	7
72	Grille Radiater (Chrompated)	No	1847
73	Hand Brake Cable (Front)	No	677
74	Hand Brake Cable(Rear)	No	547
75	Head and Rotor	No	0
76	Head Gasket	No	477
77	Head lamp 3 pin	No	147
78	Head Lamp Assembly	No	2777
79	Horn	No	697
80	Indicator/Side Light bulb	No	47
81	Injector Nozzle	No	1437
82	Kilometer Cable	No	347
83	Kin Pin Bearing	No	347
84	Kin Pin Sim	No	47
85	Lamp assy Front Bumper LH	No	247
86	Lamp Assy Front Bumper RH	No	247
87	Lens Front Indicator/side Light LH	No	227
88	Lens Front Indicator/Side Light RH	No	227
89	Link Rod Washer	No	47
90	Lifter Valve	No	427
91	Main Bearing Oil Seal	No	377
92	Mirror LH/RH	No	547
93	Oil Filter	No	109
94	Oil Pump Gear Inner	No	147
95	Oil Pump Gear Outer	No	7
96	Oil Seal Cam Shaft	No	247
97	Oil Seal engine rear	No	147
98	oil Seal Front axle inner	No	217
99	Oil Seal Front Hub Outer	No	7
100	Oil seal Oil Axle Outer	No	447
101	Oil Seal Rear Inner	No	47
102	Oil Seal Tail Pinion	No	247
103	Oil Seal Valve Stem	No	27
104	Piston Ring	No	777
105	Power Steering Oil	No	347
106	Power Steering Pump	No	7
107	Pressure Plate	No	1477



108	Pump Service Kit	No	7
109	Radiator Cap	No	147
110	Radiator Assembly	No	3977
111	Rain Guard	No	1477
112	Rear View mirror	No	477
113	Relay Glow Plug	No	127
114	Release Bearing	No	707
115	Seal oil Timing Gear case	No	7
116	Self Starter Armature	No	1677
117	Shock Absorber	No	0
118	Shock Absorber Bush (Front)	No	127
119	Shock Absorber Front	No	3977
120	Shock Absorber Rear	No	1177
121	Shock Bush Lower/Upper	No	7
122	Shocker Washer	No	7
123	Silencer Assy	No	3277
124	Silencer Pipe Holder Bush	No	127
125	Solenoid Switch (self)	No	1877
126	Spacer Rear Axle Bearing	No	127
127	Spring Bush Front - Rubber	No	87
128	Spring Front Leaf 2nd	No	1
129	Spring Front Leaf 3rd	No	1
130	Spring Front Leaf 4th	No	1
131	Spring Front Leaf 5th	No	1
132	Spring Metal Bush	No	1
133	Spring Front Leaf Main	No	1
134	Spring Mountain	No	1
135	Spring Rear Leaf 2nd	No	1
136	Spring Rear Leaf 3rd	No	1
137	Spring Rear Leaf 4th	No	1
138	Spring Rear Leaf 5th	No	1
139	Spring Rear Leaf Main	No	1
140	Stabilizer Link Bush	No	47
141	Stabilizer Link Rod	No	47
142	Stablizer Bush D type	No	227
143	Steering Damper	No	0
144	Steering Knuckle Kit	No	0
145	Steering Rack Assembly	No	6377
146	Steering Rod	No	7

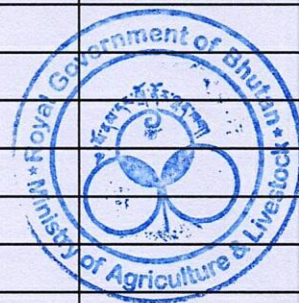 


147	Steering Yoke	No	1877
148	Suspension Arm Upper	No	1977
149	Suspension Arm Lower	No	747
150	Thermostat Valve	No	547
151	Thrust Washer	No	447
152	Tierod End	No	447
153	Timing Belt	No	677
154	Top sharp oil seal	No	127
155	Valve Exhaust	No	277
156	Valve External	No	277
157	Valve Guide	No	337
158	Valve Inlet	No	347
159	Valve Inner	No	7
160	Valve Seal	No	27
161	Valve Stem	No	247
162	Voltage Regulator	No	247
163	Water Pump Assembly	No	1777
164	Wheel Drum	No	1677
165	Wheel Nut and Bolts (Front/Rear)	No	10
166	Wind Shields Glass	No	4977
167	Wiper Arm	No	227
168	Wiper Motor	No	497
169	Wiper Blade	No	677
170	Wiper Tank Motor	No	347
171	Extra Accessories	No	0
172	Brake Oil Dot 3 (350 ml)	No	147
173	Anabond Gum	No	97
174	Cloth	No	10
175	Coolant (per liter)	No	247
176	Dash Board Polish	No	337
177	Distilled Water	No	37
178	Engine Oil	No	397
179	Gear Box Oil Seal	No	347
180	Gear Oil	No	387
181	Grease	No	348
182	Power Steering Oil	No	547
183	Rope	No	7
184	Tail and Pinum Gear (Set) (4 Wheel) Front	No	0
185	Disel Filter	No	0

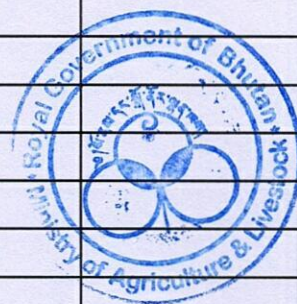 


186	Seat Cover (Set)	No	9777
			105643


Sl. no	Services	Unit	
			Kuenzom Automobile Workshop
1	Eco- Versa	No	0
2	Labour Charges (General)	No	0
3	Water Servicing and Air Servicing	No	447
4	Air Filter changing	No	7
5	Cam Shaft Oil Seal changing	No	247
6	Crank Shaft Grinding	No	2777
7	Engine Block Boring	No	2277
8	Engine Cleaning	No	7
9	Engine Head Removing and Refitting	No	2377
10	Engine Oil & Filter changing	No	297
11	Engine Overhauling 4 Cylinder Engine	No	2377
12	Engine Overhauling 6 Cylinder Engine	No	0
13	Engine Turning	No	1247
14	FIT Overhauling	No	0
15	Fuel Filter changing	No	247
16	Glow Plug changing	No	477
17	Head Gasket changing	No	1277
18	Main Bearing Oil Seal changing	No	377
19	Oil Pressure Switch changing	No	7
20	Oil Pump Gear changing	No	7
21	Piston Ring changing	No	477
22	Radiator Servicing (Removing & Refetting)	No	877
23	Replacement of Radiator Hose	No	147
24	Replacement of Thermostat Valve	No	7
25	Replacement of Fan Belt	No	197
26	Replacement of Injector Nozzle	No	377

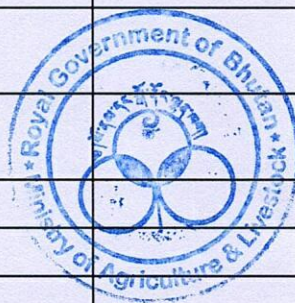 


27	Spark Plug changing or Servicing each	No	0
28	Tappet Adjustment	No	7
29	Tappet Cover Gasket changing	No	677
30	Timing Belt changing	No	677
31	Timing Gear Cover Oil Seal changing	No	97
32	Valve Facing each valve	No	77
33	Water Pump overhauling	No	97
34	Labour Charges (Electrical System)	No	0
35	Alternator Removing and Refitting/Overhauling	No	477
36	Alternator Repairing	No	997
37	Back Light changing each	No	7
38	Battery changing	No	7
39	C.B Point changing	No	0
40	changing of Head Light Bulb	No	7
41	Complete Electrical Wire Check Up	No	0
42	Cut Out Adjustment	No	7
43	Dynamo Armature Rewinding	No	777
44	Dynamo Overhauling	No	977
45	Fog Light New Fitting	No	147
46	Head Light Bulb changing each	No	7
47	Head Light changing each	No	47
48	Horn Adjustment/Fitting	No	97
49	Ignition Coil changing	No	0
50	Indicator Assembly changing each	No	0
51	Indicator Bulb changing	No	7
52	Indicator Glass changing each	No	0
53	Replacement of Electrical Switches	No	97
54	Replacement of Relays	No	47
55	Roof Lamp Bulb changing	No	7
56	Self Armature Rewinding	No	177
57	Self Starter Overhauling	No	147

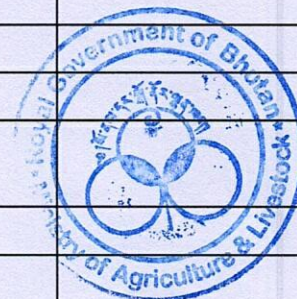 


58	Self Starter Removing and Refitting	No	747
59	Self Starter Repairing	No	977
60	Side Light Fitting	No	7
61	Wiper Arm and Blade changing	No	7
62	. Labour Charges (Steering Portion)	No	0
63	Kingpin Overhauling (one side)	No	7
64	Knuckle Oil Sealing changing	No	7
65	Power Steering Overhauling	No	777
66	Replacement of Pitman Arm	No	7
67	Steering Box Overhauling	No	377
68	Steering Yoke changing	No	7
69	Tid Rod End changing	No	297
70	Tube Repairing/Patching	No	197
71	Tyre Opening and Fitting	No	197
72	Wheel Alignment	No	397
73	Labour Charges (Transmission Portion)	No	0
74	Removing & Fitting of Spring Assy	No	677
75	Centre Bearng changing	No	7
76	Clutch Master Cylinder Kit changing	No	127
77	Clutch Master Cylinder Assembly changing	No	147
78	Clutch Plate changing	No	977
79	Cross Bearing Replacement each	No	477
80	Crown and Tail Fitting	No	1149
81	Differentail Overhauling/Remvoing & Refitting	No	1277
82	Fly Wheel Bearing changing	No	147
83	Front Axle Oil Seal changing each wheel	No	197
84	Front Hub Oil Seal changing each wheel	No	197
85	Front Wheel Bearing changing	No	477

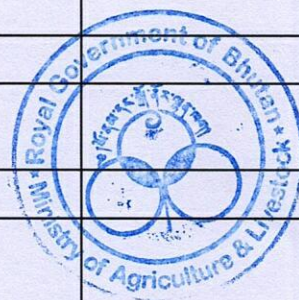 

86	Gear Box Overhauling	No	1197
87	Gear Oil changing	No	177
88	Nipple Greasing with Grease	No	477
89	Hubs Greasing per wheel	No	377
90	Knuckle Oil changing	No	0
91	Pressure Plate changing	No	1277
92	Propeller Shaft Bolt Replacement	No	147
93	Propeller Shaft Cross Bearing changing each	No	147
94	Rear Axle Oil Seal changing and Greasing each	No	197
95	Rear Hub Oil Seal changing each wheel	No	147
96	Release Bearing changing	No	977
97	Gear Box removing and refitting	No	2277
98	Spring Bush changing complet	No	477
99	Spring Leafs changing	No	277
100	Tail Pinion Bearing changing	No	177
101	Tail Pinion Oil Seal changing	No	147
102	Wheel Bolt changing each wheel	No	127
103	Labour Charges (Brake Portion)	No	0
104	Adjustment of brake (one each)	No	127
105	Brake Booster Assembly changing	No	127
106	Brake Booster Kit changing	No	127
107	Brake Disc removing and refitting	No	477
108	Brake Disc turning/ facing	No	947
109	Brake Drum turning	No	947
110	Brake Lining changing	No	7
111	Brake Pad changing (1 side)	No	277
112	Brake Servicing each wheel	No	177
113	Brake Shoe changing rear wheel	No	197
114	Brake Master Cylinder changing	No	177

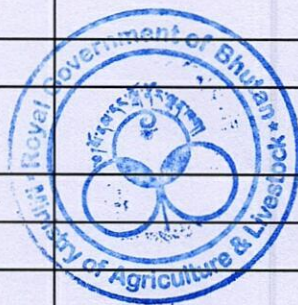 

115	Brake Master Cylinder repair kit changing	No	127
116	Front Brake Calprier Kit changing	No	97
117	Gas Welding (per inch)	No	97
118	Hoot Stitching	No	0
119	Master Cylinder Assembly changing	No	47
120	Master Cylinder Kit changing	No	47
121	Number Plate Writing	No	377
122	Wheel Cyclinder	No	2977
123	W.C Kit changing each wheel front	No	7
124	Wheel Bearing changing and fitting	No	197
125	Wheel Bearing Rear changing	No	197
126	Break Light Assymby	No	7
127	Labour Charges (Suspension Syetem	No	0
128	Coil Spring changing	No	7
129	Complete Spring bush changing	No	0
130	Shacker Plate/Pin changing each	No	47
131	Shackle Absorber Mounting chaging	No	47
132	Shock Absorber Bush changing	No	177
133	Shock Absorber changing each (front)	No	277
134	Shock Absorber changing each (rear)	No	177
135	Spring Leaf changing (each spring)	No	347
136	Spring rearranging	No	377
137	Stablizer Bush changing each	No	47
138	Labour Charges (Exhaust System	No	0
139	Silencer Brake/Mounting changing	No	7

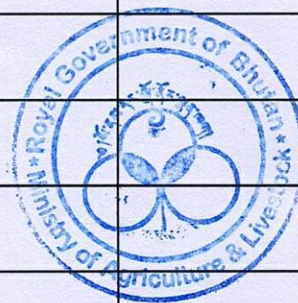 

140	Silencer Box removing and refitting	No	47
			49989
	Spare parts		105643
	Services		49989
	Total		155632

